



Ingeniería Electrónica  
*SMART IDENT*

---

CIM-2000  
CARD DISPENSER CARTRIDGE TYPE  
MAGNETIC, RF AND IC CARD  
Specifications

---

User Manual

CIM2000.UM.I.EN.doc

<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
		I	2 OF 65	2012. 11. 08

REVISION HISTORY

No	DATE	DESCRIPTION	REV	PAGE	F/W Name
1	2007.05.06.	The first	A	57	
2	2007.09.07	Add a drawing	B	57	
3	2007.10.01	Drawing modify and Change the code and status in Command"C13"	C	56	
4	2008.4.20	Add Mifare 4k	D	60	
5	2010.09.02	Add the All track write function.	E	61	
6	2010.11.05	Technical drawing change	F	61	
7	2011.02.10	Modify the Model Name	G	61	
8	2011.06.28	Add the Ultra Mifare function.	H	65	
9	2011.11.08	SAM function and "I23" command is added	I	65	

<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
		I	3 OF 65	2012. 11. 08

## MODEL NAME INFORMATION

C I M - 2 X X X X X X									
Interface	Function	MS/IC/RF	Track	Option	Capacity			Option II	Option III
RS-232C	2: Single Cartridge	0 : - 1 : MS Only 2 : MS & IC-Contact 3 : MS & RF 4 : MS & IC & RF 5 : IC Only 6 : IC & RF 7 : MS Read Only 8 : RF Only	0 : Without Magnetic 1 : ISO 1 Trk 2 : ISO 2 Trk 3 : ISO 3 Trk 4 : ISO 1,2 Trk 5 : ISO 1,3 Trk 6 : ISO 2,3 Trk 7 : ISO 1,2,3 Trk	0 : Without Bezel 1 : LOW-CO Short Bezel 2 : HI-CO Short Bezel 3 : LOW-CO & Shutter 4 : HI-CO & Shutter 5 : Shutter 6 : Short Bezel 7 : LOW-CO Without Bezel 8 : HI-CO Without Bezel	A : 0.2T B : 0.38T C : 0.5T D : 0.76T E : 0.84T F : 1.0T	G : 0.2T H : 0.38T I : 0.5T J : 0.76T K : 0.84T L : 1.0T	M : 0.2T N : 0.38T O : 0.5T P : 0.76T Q : 0.84T R : 1.0T	D : Card Drop (Without Bezel)	H: HI-CO & LOW-CO Selector
					200 PCS	300 PCS	500 PCS		

<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
			I	4 OF 65

## **C O N T E N T S**

**Overview**

**System Block Diagram**

**Specification**

**Magnetic Card Process**

**IC Card Process**

**RF Card Process**

**Communication Interface**

**Technical Drawing**

**Command Detail**

**Error Detail**

**Precautions**


<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
			I	5 OF 65

## **OVERVIEW**

CIM-2000 Series is a set of card issuing machine for the magnetic, IC, and RF card in conjunction with the KYT2500 and KYT3000 series. This model can be used for magnetic card conforming to the ISO7816-2 standard and most of the IC cards conforming with the ISO7816-4 T=0. Additionally, this model also can be used for RF card conforming to the MIFARE.


<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
		I	6 OF 65	2012. 11. 08

## SYSTEM BLOCK DIAGRAM

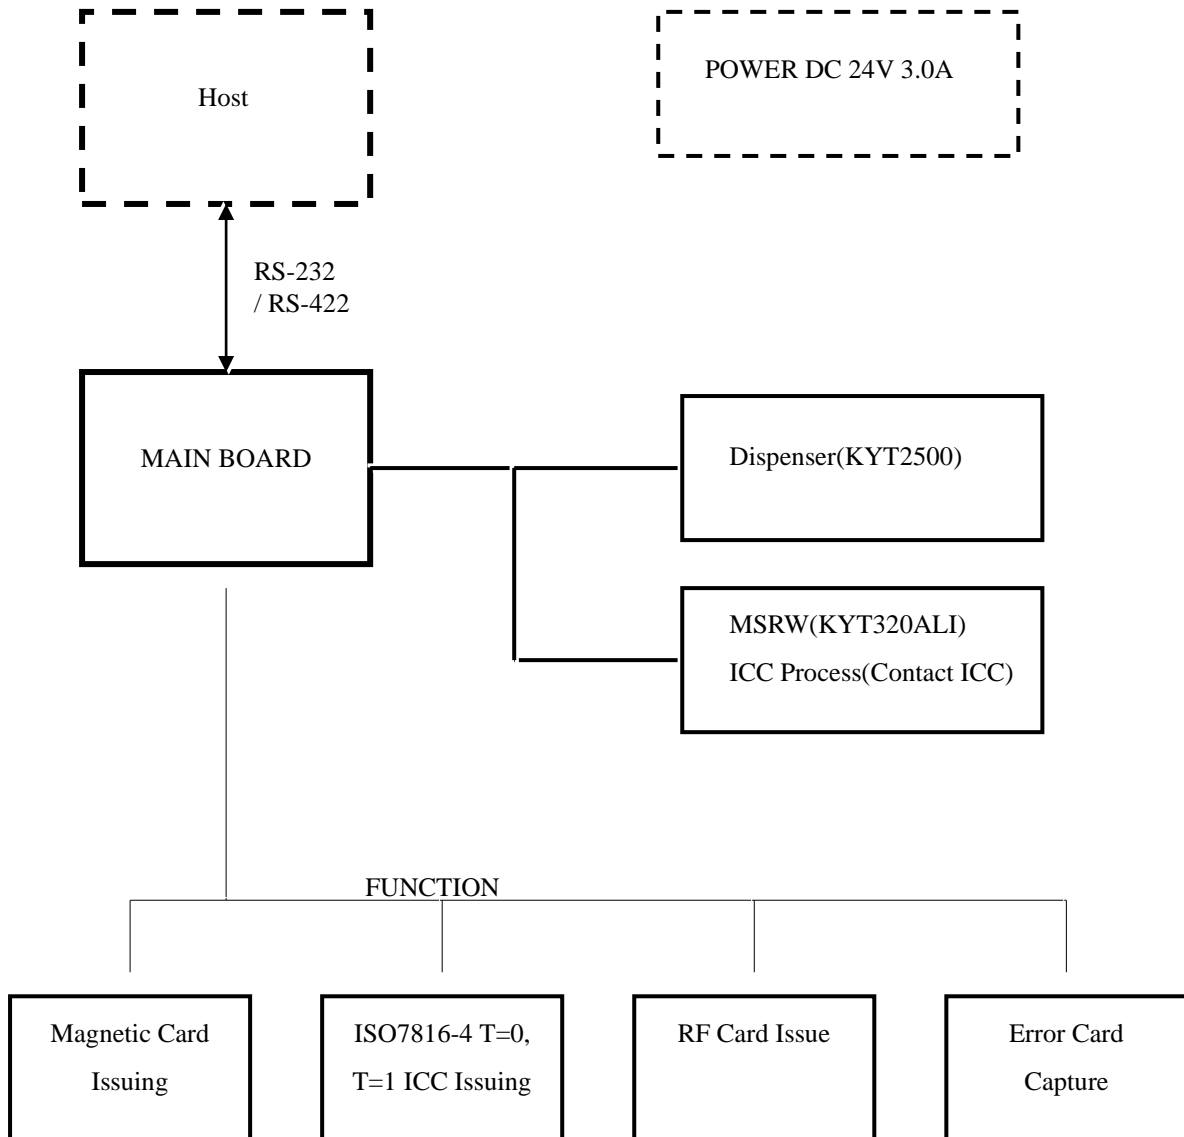

<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
		I	7 OF 65	2012. 11. 08


◆ *RS – 232 Connection*

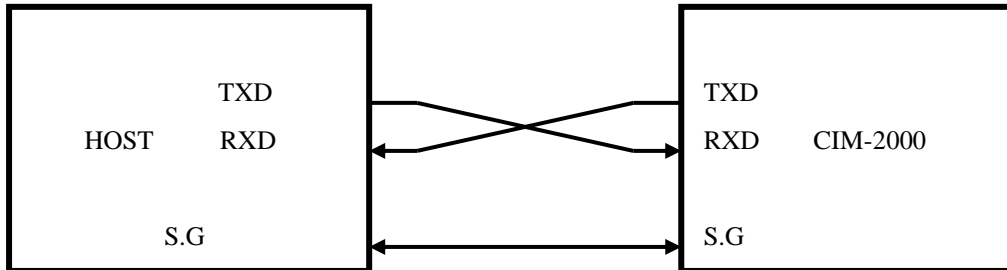

CASE 1) Part Number : D-SUB CONNECTOR(FEMALE)

Pin No	INDEX	Remark
2	RXD	Receive
3	TXD	Transmit
5	S.G	Signal Ground

◆ *RS422 Connection*

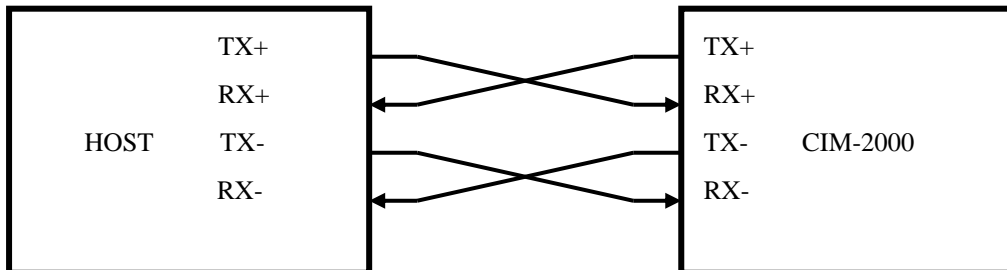


CASE 1) Part Number : D-SUB CONNECTOR(FEMALE)

Pin No	INDEX	Remark
1	TX+-	
4	RX+	
6	TX-	
8	RX-	

<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
		I	8 OF 65	2012. 11. 08

◆ *Power Connection*

Front View (male)

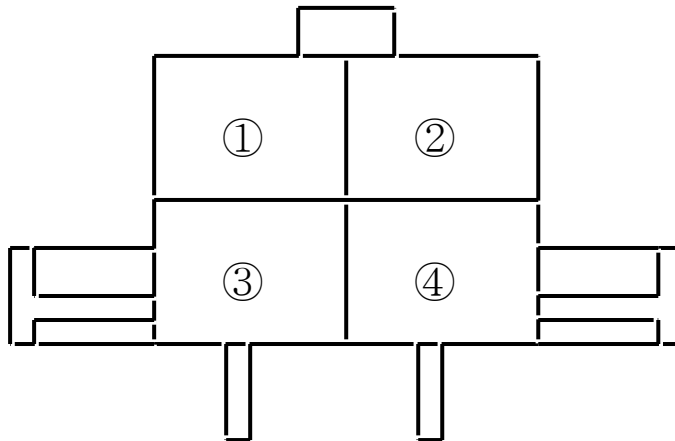

Part Number : 5566-04A1 (MOLEX)

<CIM-2000>

Pin No	Signal Name	Direction
1		INPUT
2	DC +24V	
3		
4	GND	



<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
		I	9 OF 65	2012. 11. 08

## SPECIFICATIONS

### ◆ *basic functions*

	Spec	Remark
Dimension	128.5mm(W) x 497mm(L) x 325mm(H)	
Weight	5.6 Kg	
Input power	DC 24V 3A	
Card Feeding Speed	510mm/Sec ±10%	

### ◆ *Environment Requirements*

Operating Locus : in door use Only

Ambient Temperature

Storage : -20 °C to 70 °C(No functional error to be found in 12 hours after returning to normal environment)

Operating : 5 °C to 50°C (In 0°C to +5°C range, all specifications but 'Warped card' to be satisfied)

Ambient Relative Humidity

Storage : 0% to 95% RH(No functional error to be found in 12 hours after returning to normal environment)

Operating : 5 % 90% RH(No Condensation)

Vibration

: Amplitude 2mm, 10 to 50 Hz in X, Y, Z directions for 30min, 2G or less

Shock Endurance

: 30G, 11ms

Encoding Speed : 2.3 ~ 5 Sec/Card

Life Time : More than 500,000card passes(1pass : one forward and backward)

Error Rate : Less than 5/1,000 cycle(Test Card : KYT Standard)

<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
			I	10 OF 65

◆ *Controller Environment*

Communication

: RS422 OR RS232C Interface

: Baud Rate – 9600 BPS

19200 BPS

38400BPS (Default)

57600BPS

: 8Data bit, 1 Start bit, None Parity bit, 1 Stop Bit

<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
		I	11 OF 65	2012. 11. 08

## **MAGNETIC CARD PROCESS**

◆ *Total processing time*

: Less than 1.2 Sec

◆ *Life and Reliability*

Life of Head : Minimum 1,000,000 passes

(One pass is for forward and backward movement)

Error Rate : 3/1000 cycle

◆ *Reference Standards*

: ISO 7811-1,2,3,4,5 : identification cards – Recording technique

◆ *Recording*

	ISO Track 1	ISO Track 2	ISO Track 3
BPI	210	75	210
Capacity	Max 79	Max 40	Max 107
Reading Methods	F2F		
Length	Variable		
Card thickness	Plastic : 0.76 ±0.08mm		

◆ *Warped Cards*

: This term refers to an evenly warped card having a height from the top of the convex surface to the base of the warped edge.



H : 3.00mm Max. for card jamming

Doc No	CIM2000 SPECIFICATION	REV	PAGE	DATE
		I	12 OF 65	2012. 11. 08


## IC CARD PROCESS

This model provides most type of IC card compliant to ISO7816 T=0, T=1.

◆ *Processing time* : Less than 1 Sec

◆ *Number and Location of the contacts on IC Card*

: Number and location of the contacts on IC Card is specified in ISO 7816-2 figure 2  
Refer to Appendix A.

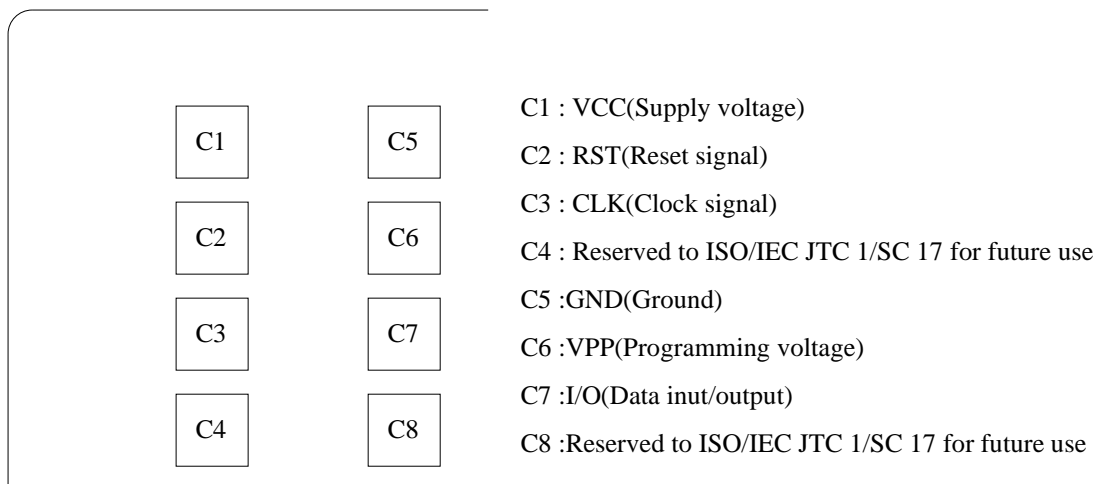

◆ *Power Consumption*

Motor Starting or Reversing : Less than 310mA(50mSec)

Card Feed & Reading : Less than 690mA

Card Feed & Writing : Less than 700mA

Steady state : Less than 180mA

◆ *Life and Reliability*

IC Contact : Approximately 1,000,000 passes

Error Rate : 3/1000 cycle

<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
		I	13 OF 65	2012. 11. 08

## **RF CARD PROCESS**

The RF module supports most of RF cards conforming with the ISO14443-3 TypeA(MIFARE Card) with 8 Kbits memory.

◆ *Processing time* : Once Block

Command	Parameter	Time (mSec)		Note
		Type	Max	
Card Read	1 Block	100		Without card moving
Card Write	1 Block	150		Without card moving, With Verify
Card Decrement	1 Block	120		Without card moving
Card Increment	1 Block	120		Without Card moving

◆ *Operating Frequency*

Operating Frequency : 13.56 MHz

Data Transfer Baud : Baud rate 106Kbaud

<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
		I	14 OF 65	2012. 11. 08

## COMMUNICATION INTERFACE

### ◆ *Communication Method*

Asynchronous, Half duplex.

Baud Rate : 9600 – 57600Bps , Default : 38400Bps

Start Bit : 1Bit

Data Length : 8Bit

Parity : None

Stop Bit : 1Bit

### ◆ *Communication Protocol Format*

#### *1 Command Frame Format.*

SOH	Null	Length	STX	CMD	DATA	ETX	BCC
1BYTE	1BYTE	2BYTE	1BYTE	3BYTE	N-BYTE	1BYTE	1BYTE


#### *2 Positive Response Frame Format*

SOH	Null	Length	STX	CMD	GOOD	0x01	DATA	ETX	BCC
1BYTE	1BYTE	2BYTE	1BYTE	3BYTE	1BYTE	1BYTE	N-BYTE	1BYTE	1BYTE

#### *3 Negative Response Frame Format*

SOH	Null	Length	STX	CMD	E-Code	0x00	ETX	BCC
1BYTE	1BYTE	2BYTE	1BYTE	3BYTE	2BYTE	1BYTE	1BYTE	1BYTE

#### *4 BCC (Check Sum)*

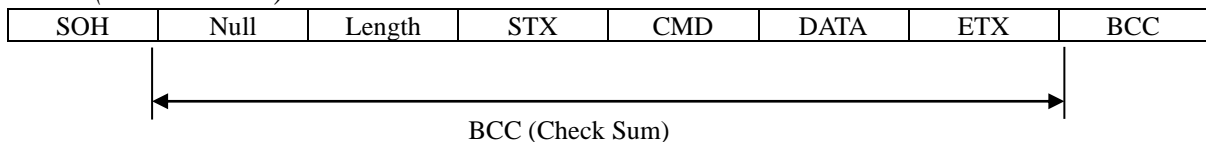

Command Frame BCC = Null ^ Length ^ STX ^ CMD ^ DATA ^ ETX.

Positive Response BCC = Null ^ Length ^ STX ^ CMD ^ GOOD ^ 0x01 ^ DATA ^ ETX.

Negative Response BCC = Null ^ Length ^ STX ^ CMD ^ E-Code ^ ETX.

<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
		I	15 OF 65	2012. 11. 08

### 5. Explanatory note of technical words

Name	Detail
Null	Reserved. Always 0x00.
Length	Data Length from the CMD to DATA.
CMD	Instruction Code (3 Bytes)
GOOD	Normal Execution : 0x0000 (2 Bytes)
E-Code	Command Failed: Refer to "Error Code" (2 Bytes)
BCC	Check Sum.

<Length>, <E-Code>


High Byte	Low Byte
-----------	----------

### 6. Control Characters

Name	Hex Value	Detail
SOH	0x01	Start of Header
STX	0x02	Start of Text
ETX	0x03	End of Text
ENQ	0x05	Enquiry
ACK	0x06	Positive Acknowledge
NAK	0x15	Negative Acknowledge
CAN	0x18	Cancel

## 7 COMMUNICATION SEQUENCE / TIMING


### 7.1 CHARACTER GUIDE TIME

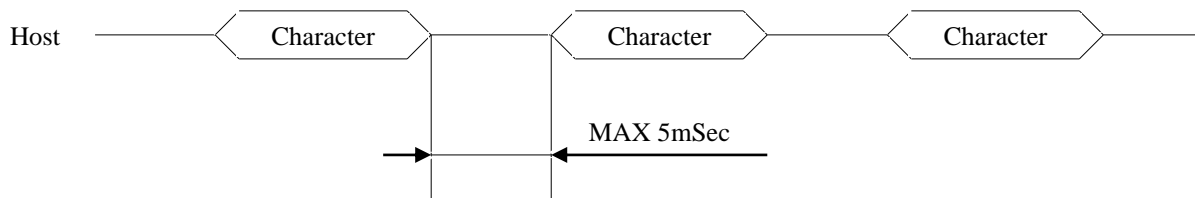


If no consecutive character within 5msec., do time out.

### 7.2 Command

Doc No	CIM2000 SPECIFICATION	REV	PAGE	DATE
		I	16 OF 65	2012. 11. 08


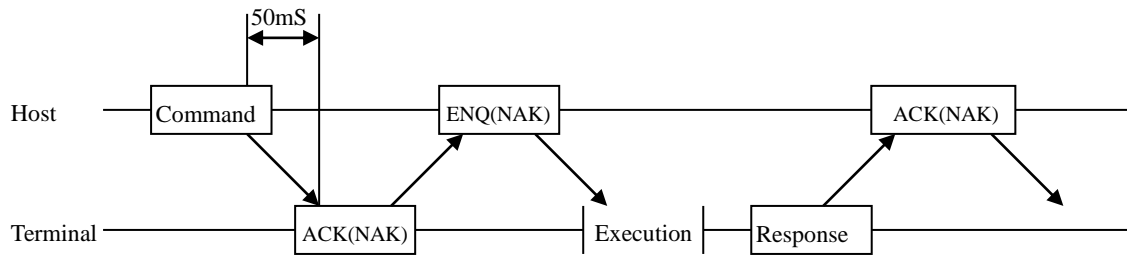


### 7.3 Inquiry

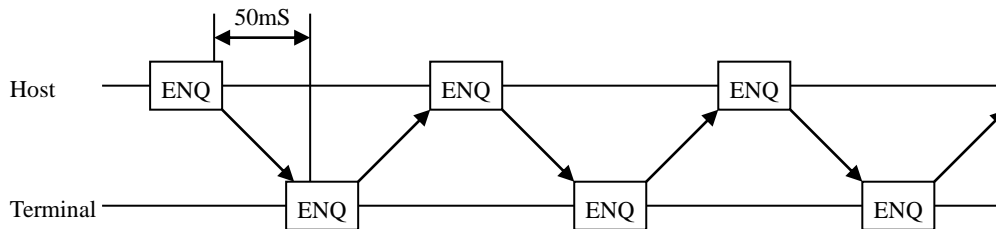

### 7.4 Sequence







#### 7.3.1 General

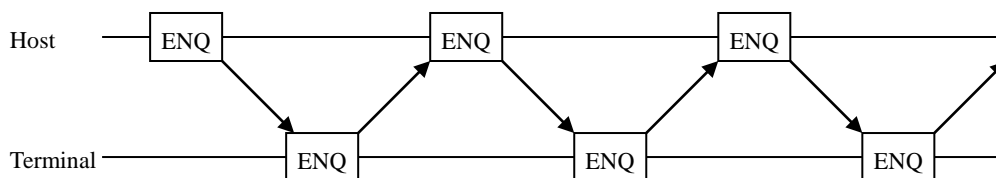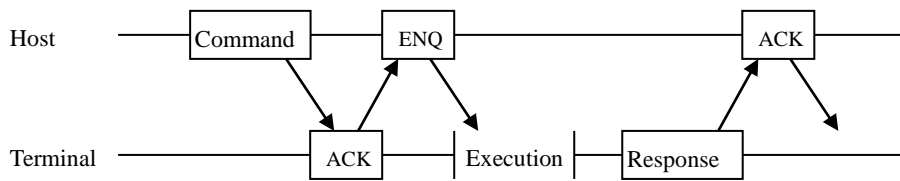







#### 7.3.2 Error1



Doc No	CIM2000 SPECIFICATION	REV	PAGE	DATE
		I	17 OF 65	2012. 11. 08

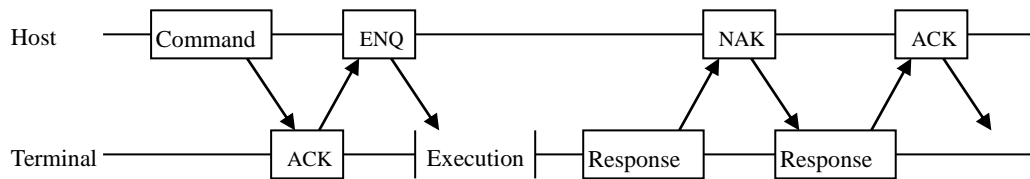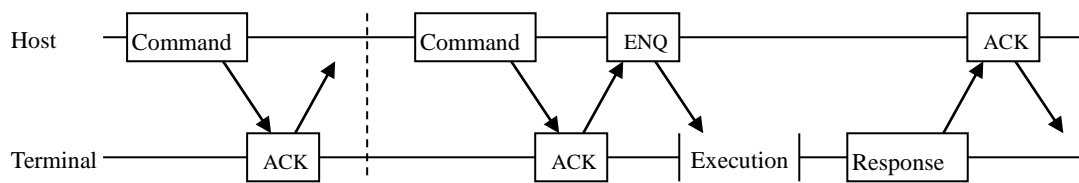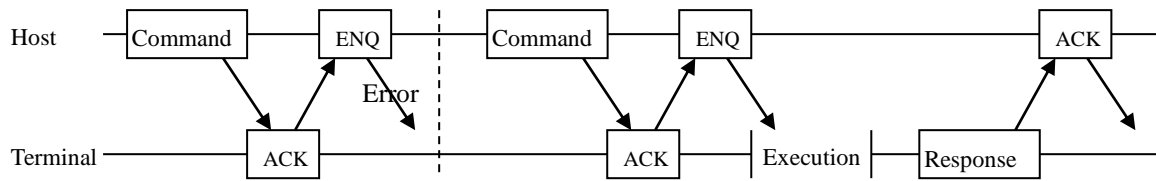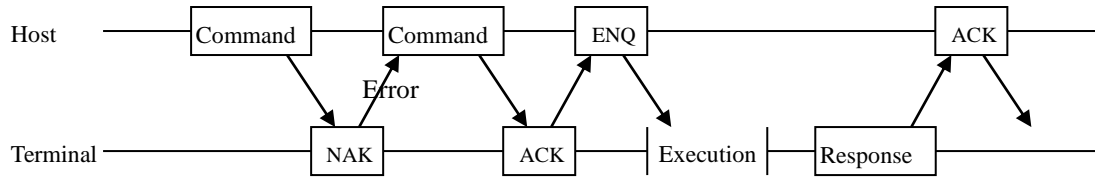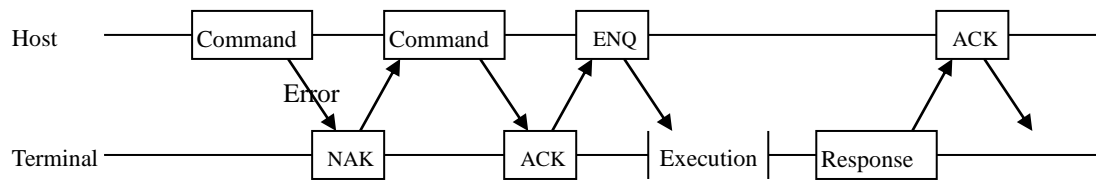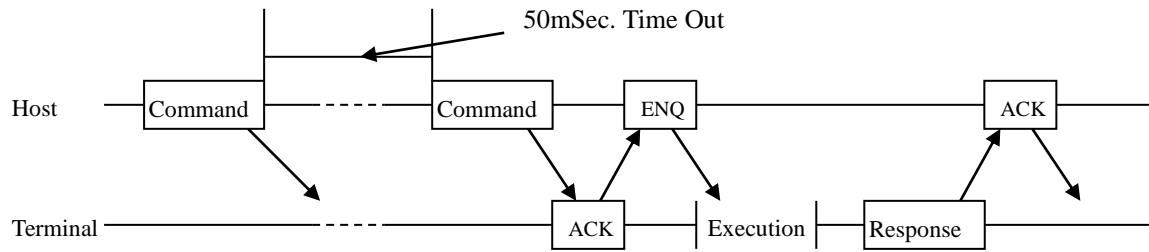


Doc No	CIM2000 SPECIFICATION	REV	PAGE	DATE
		I	18 OF 65	2012. 11. 08

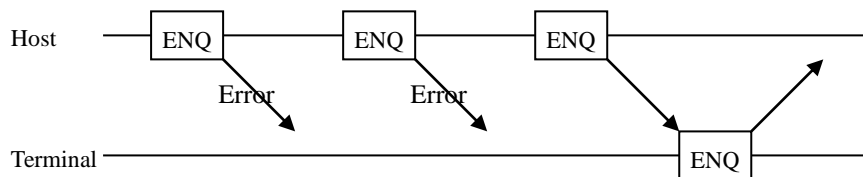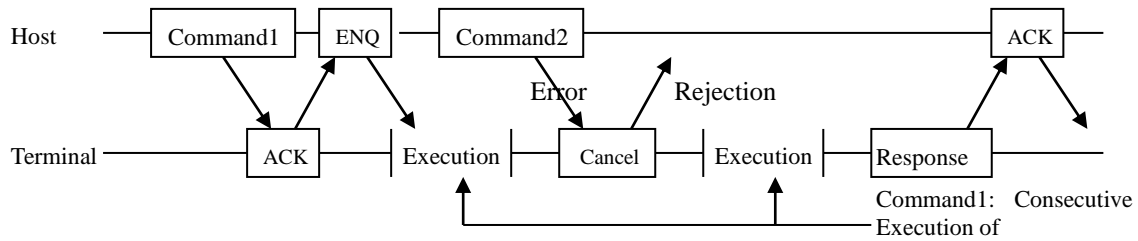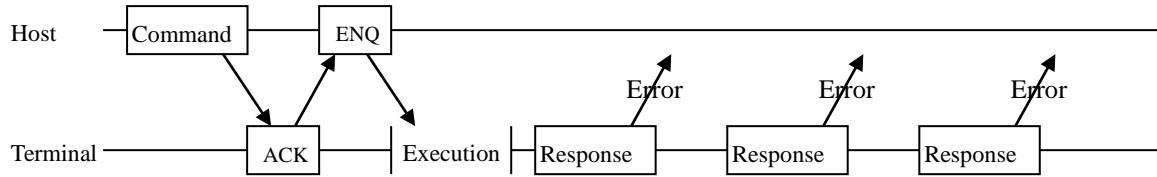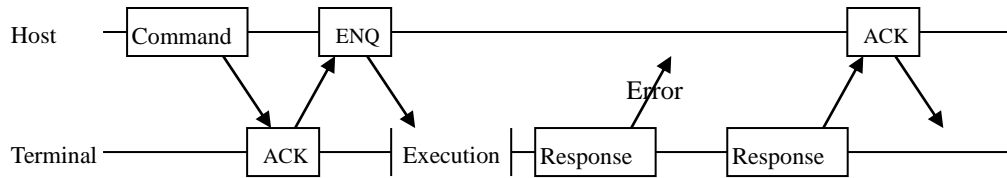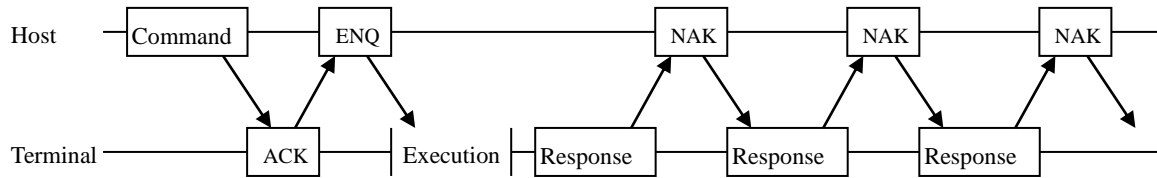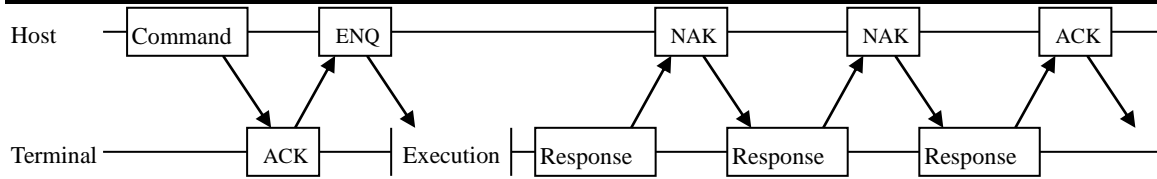


Doc No	CIM2000 SPECIFICATION	REV	PAGE	DATE
		I	19 OF 65	2012. 11. 08

### 7.3.3 Error2

- When received the NAK packet consecutively.

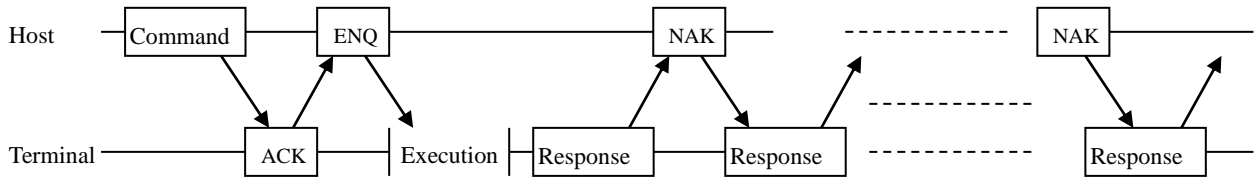

- When the Host sends the command without the ACK packet.



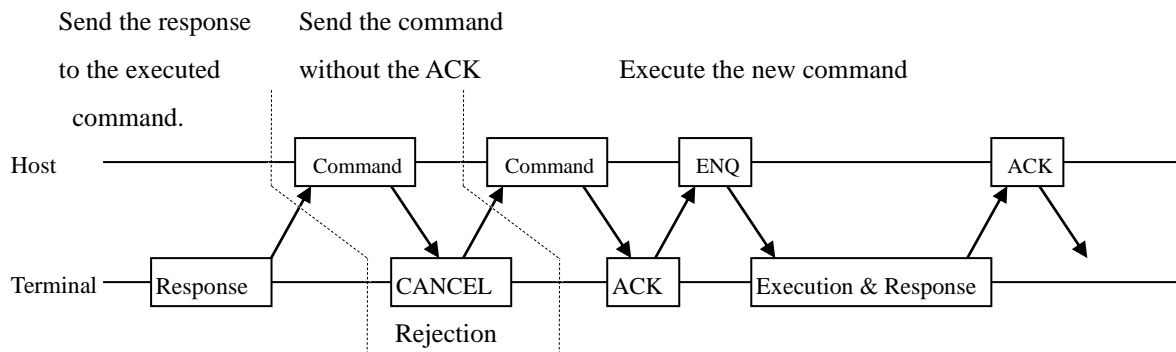


The terminal should ignore the command received before it sends the ACK packet, send the CANCEL packet. The second command will be treated as the ACK packet and executed with no ACK.


Doc No	CIM2000 SPECIFICATION	REV	PAGE	DATE
		I	20 OF 65	2012. 11. 08

# TECHNICAL DRAWING

 


< CIM-21xx, CIM-22xx, CIM-23xx, CIM-24xx >

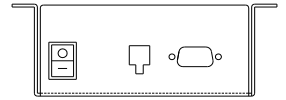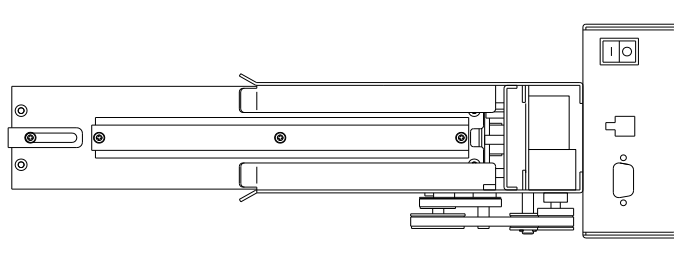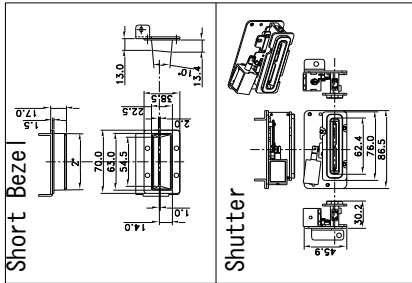

CARD 300PCS 407.3  
CARD 500PCS 509.5



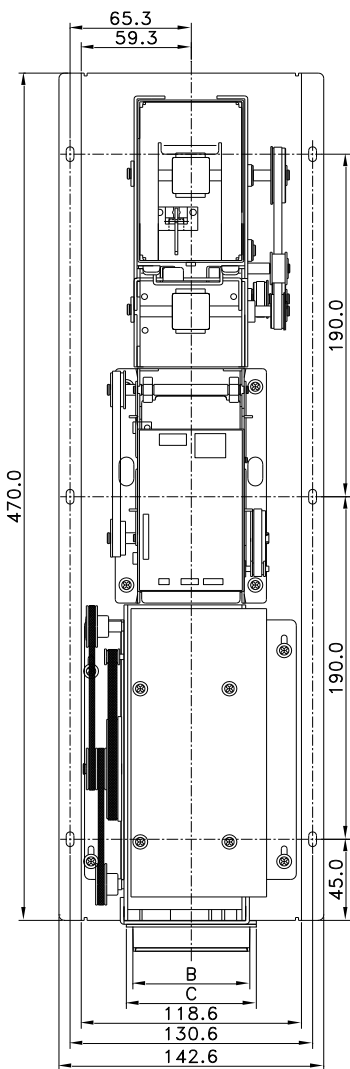


	Shutter	Short Bezel
A	44.0mm	16.9mm
B	71.0mm	62.5mm
C	79.0mm	70.0mm

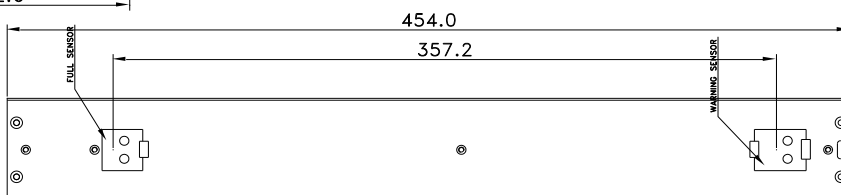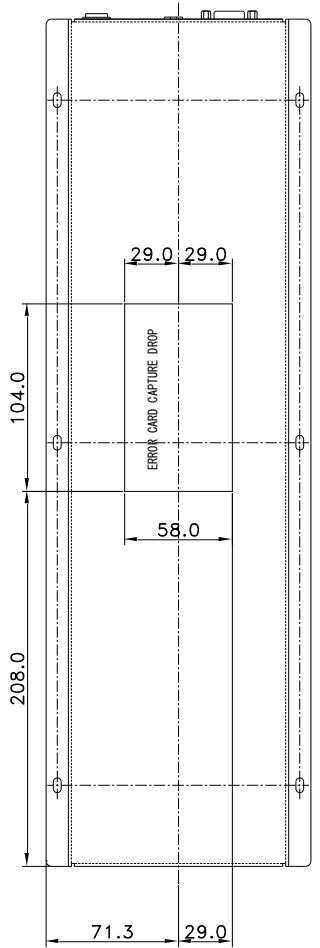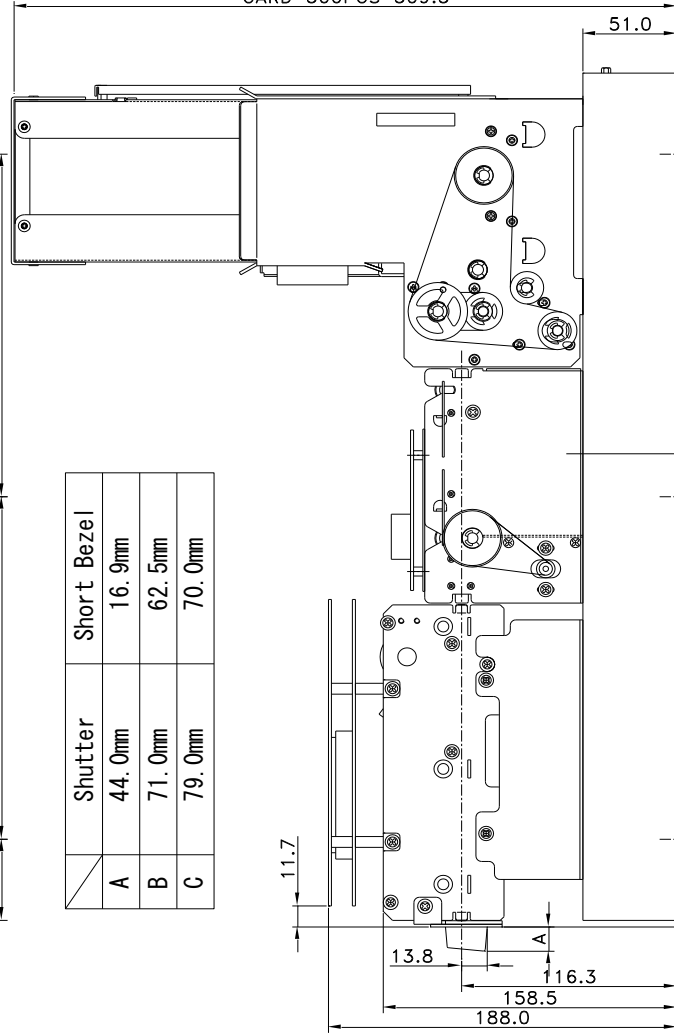


Doc No	CIM2000 SPECIFICATION	REV	PAGE	DATE
		I	21 OF 65	2012. 11. 08

<CIM-28XX> - Error bin type (Card capture box)

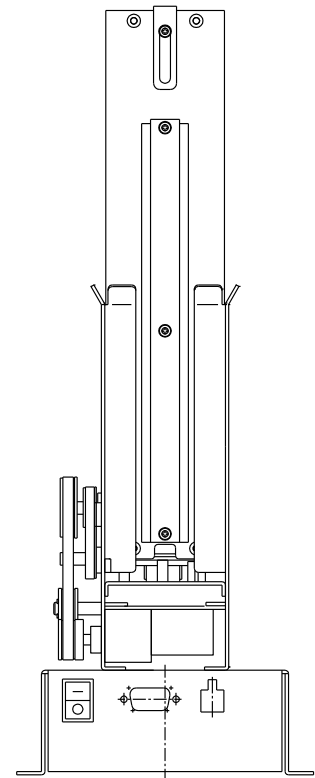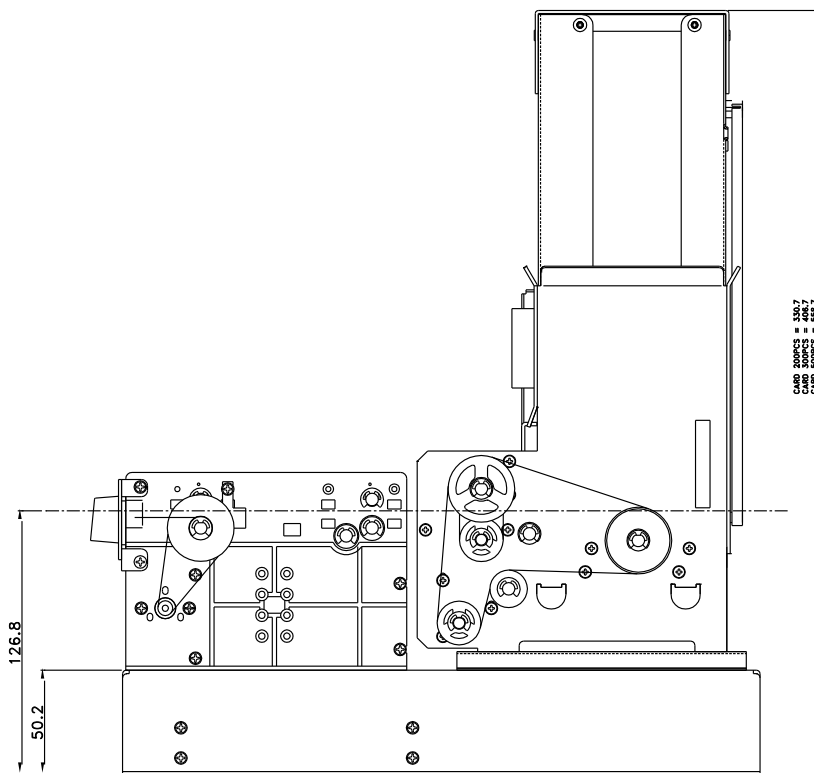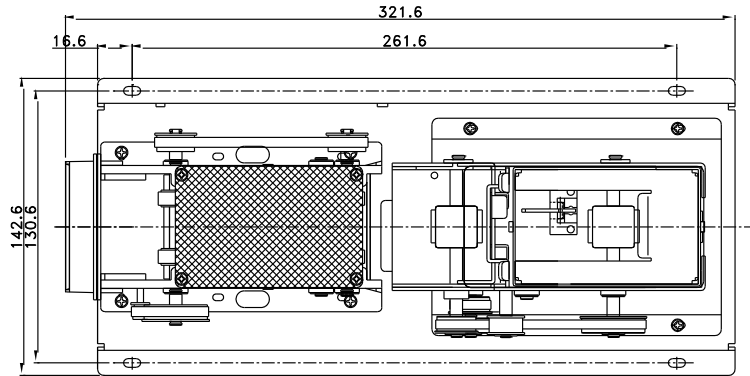

Doc No	CIM2000 SPECIFICATION	REV	PAGE	DATE
		I	22 OF 65	2012. 11. 08

<CIM-2805, Designed for Customer requirements>

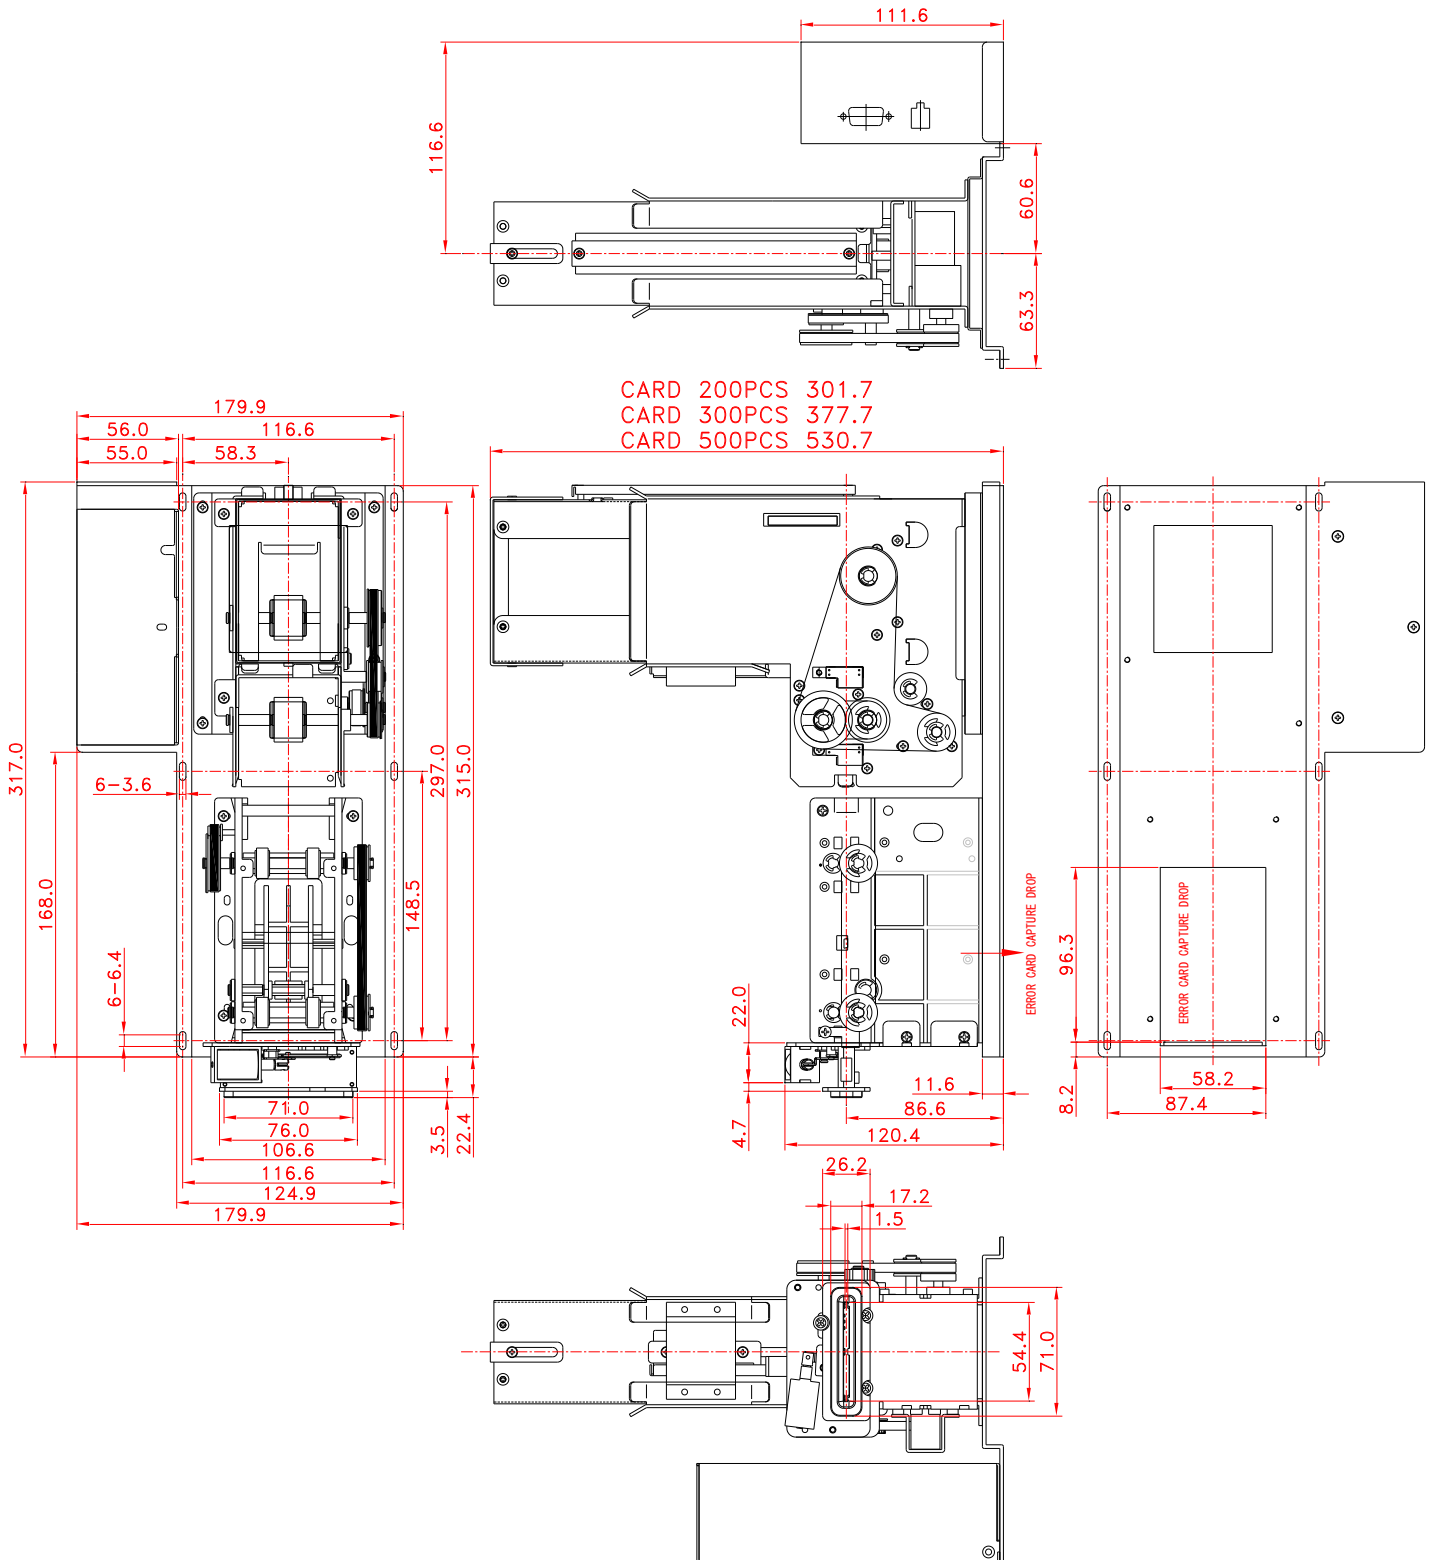

<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
		I	23 OF 65	2012. 11. 08

## COMMAND DETAIL

### ◆ *Command List*

	Item	Cm0	Cm1	Cm2	Detail	Note
COMMON	STATUS1	'C'	'1'	'1'	Get Model	
		'C'	'1'	'2'	Get Firmware Version	
		'C'	'1'	'3'	Get Cartridge	
		'C'	'1'	'6'	Get Card position	
	SETTING1	'C'	'2'	'1'	Set RTC IC	Check*
		'C'	'2'	'3'	Set Capture Time	Check*
		'C'	'2'	'4'	Set Retry Count	Check*
		'C'	'2'	'6'	Set Baud Rate	
		'C'	'4'	'0'	Set User Buzz	
		'C'	'4'	'8'	Select the Lo-co or High-co mode for Magnetic	
	MOVE	'C'	'3'	'1'	Card Move From Cartridge	
		'C'	'3'	'2'	Card Move To	
		'C'	'3'	'3'	Card Eject	Forward
		'C'	'3'	'4'	Card Capture	Backward
'C'		'3'	'6'	Card Drop	Forward	
MAGNETIC CARD	MAGNETIC READ / WRITE	'M'	'3'	'1'	Magnetic Card Read	
		'M'	'3'	'3'	Magnetic Card Write	Verify**
		'M'	'3'	'4'	Magnetic Card Write From Cartridge	Verify**
		'M'	'3'	'5'	Magnetic Card All Track Read	
	'M'	'3'	'6'	Magnetic Card All Track Write		
CLEANING	'M'	'5'	'1'	MSRW Header Cleaning		
IC CARD	IC CONTROL	'I'	'2'	'1'	IC Card Reset	
		'I'	'2'	'2'	IC Card Direct Control	
		'I'	'2'	'3'	Selects IC card or Sam card	
RF CARD	RF CARD READ / WRITE	'R'	'3'	'1'	RF Card Read in Block Range	
		'R'	'3'	'2'	RF Card Write in Block Range	Verify**
		'R'	'3'	'6'	RF Card Read in Sector Range	
		'R'	'3'	'7'	RF Card Write in Sector Range	
	BALANCE	'R'	'4'	'1'	Balance Increment	
		'R'	'4'	'2'	Balance Decrement	
	SECRET KEY CHANGE	'R'	'5'	'1'	Change 'Secret Key' to other Key	
		'R'	'5'	'2'	Change 'Secret Key' to all the same Key value	
		'R'	'5'	'3'	Select 'Secret Key Index'	
		'R'	'5'	'4'	Change 'RF Card Secret Key' to other Key	
		'R'	'5'	'5'	Key Set and Change 'Secret Key' to other Key	
		'R'	'5'	'6'	Key Set and Change 'Secret Key' to all the same Key value	
	RF DETECT	'R'	'6'	'1'	Check RF card in antenna area	
ULTRA MIFARE (Only use CIM- 28xxseries)	READ	'U'	'3'	'1'	Ultra RF Card Read	
	WRITE	'U'	'3'	'2'	Ultra RF Card Read	
	RF DETECT	'U'	'4'	'1'	Ultra Check RF card in antenna area	

<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
		I	24 OF 65	2012. 11. 08

◆ *Common*

*1 STATUS / SETTING*

1.1 “C11” : It is to check out Model number of CIM-2000.

☞ Command Format

SOH	Null	Length	STX	“C11”	ETX	Bcc
-----	------	--------	-----	-------	-----	-----

☞ Positive Response Format

SOH	Null	Length	STX	“C11”	GOOD	‘1’	DATA	ETX	Bcc
-----	------	--------	-----	-------	------	-----	------	-----	-----

☞ Negative Response Format

SOH	Null	Length	STX	“C11”	E-Code	‘0’	ETX	Bcc
-----	------	--------	-----	-------	--------	-----	-----	-----

☞ Response Data Structure

Model No
7Byte (ASCII)

1.2 “C12” : It is to check out Firmware Version of CIM-2000

☞ Command Format

SOH	Null	Length	STX	“C12”	ETX	Bcc
-----	------	--------	-----	-------	-----	-----

☞ Positive Response Format

SOH	Null	Length	STX	“C12”	GOOD	‘1’	DATA	ETX	Bcc
-----	------	--------	-----	-------	------	-----	------	-----	-----

☞ Negative Response Format

SOH	Null	Length	STX	“C12”	E-Code	‘0’	ETX	Bcc
-----	------	--------	-----	-------	--------	-----	-----	-----

☞ Response Data Structure

Firmware Version
5Byte (ASCII)



<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
		I	25 OF 65	2012. 11. 08

1.3 “C13” : It is check out status of Cartridge of CIM-2000

☞ Command Format

SOH	Null	Length	STX	“C13”	ETX	Bcc
-----	------	--------	-----	-------	-----	-----

☞ Positive Response Format

SOH	Null	Length	STX	“C13”	GOOD	‘1’	DATA	ETX	Bcc
-----	------	--------	-----	-------	------	-----	------	-----	-----

☞ Negative Response Format

SOH	Null	Length	STX	“C13”	E-Code	‘0’	ETX	Bcc
-----	------	--------	-----	-------	--------	-----	-----	-----

☞ Response Data Structure

Cartridge	0x00
1Byte (Hex)	1Byte (Hex)

☞ Data Variable

<Cartridge>

Code	Status	Note
0x01	Cartridge Empty(Dispenser)	
0x02	Cartridge Warning(Dispenser)	
0x04	No Cartridge (Dispenser)	

☞ Note

Cartridge Status	Detail
Cartridge Empty(issuing)	No cards in Cartridge
Cartridge Warning(issuing)	A few card
No Cartridge (Dispenser)	There isn't Cartridge

1.4 “C16” : The card is check by existent location.

☞ Command Format

SOH	Null	Length	STX	“C16”	ETX	Bcc
-----	------	--------	-----	-------	-----	-----

☞ Positive Response Format

SOH	Null	Length	STX	“C16”	GOOD	‘1’	DATA	ETX	Bcc
-----	------	--------	-----	-------	------	-----	------	-----	-----

☞ Negative Response Format

SOH	Null	Length	STX	“C16”	E-Code	‘0’	ETX	Bcc
-----	------	--------	-----	-------	--------	-----	-----	-----

☞ Response Data Structure

Card Position
1Byte (Hex)


☞ Data Variable

<Card Position>


Code	Sensor	Detail
0x01	SEN1	The card is locate NO.1
0x02	SEN2	The card is locate NO.2
0x04	SEN3	The card is locate NO.3
0x08	SEN4	The card is locate NO.4
0x10	SEN5	The card is locate NO.5
0x20	SEN6	The card is locate NO.6
0x40	SEN7	The card is locate NO.7
0x80	SEN8	The card is locate NO.8

Doc No	CIM2000 SPECIFICATION	REV	PAGE	DATE
		I	26 OF 65	2012. 11. 08

< CIM-21xx, CIM-22xx, CIM-23xx, CIM-24xx, CIM-21xx, CIM-22xx, CIM-23xx, CIM-24xx >

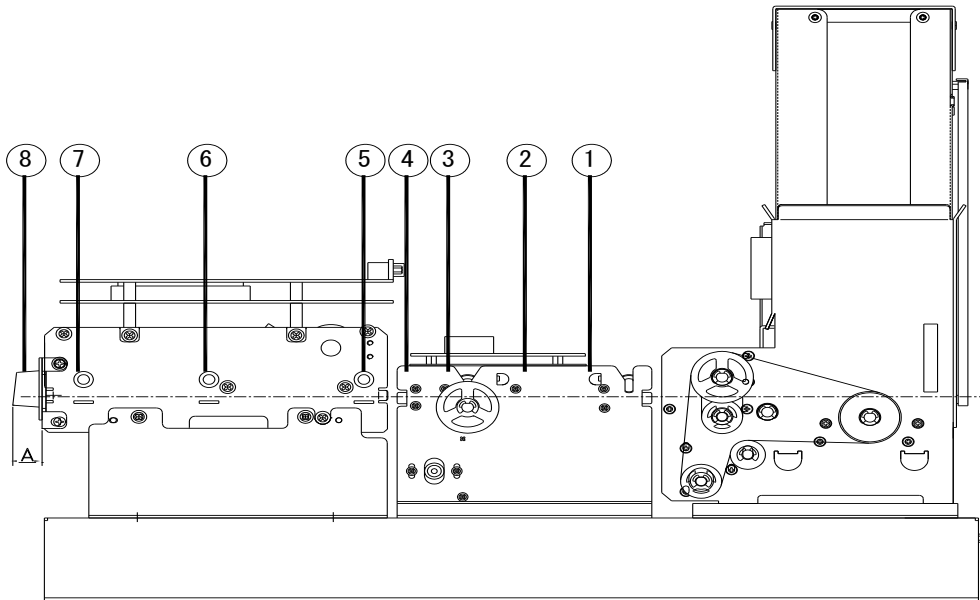


<CIM-28xx>

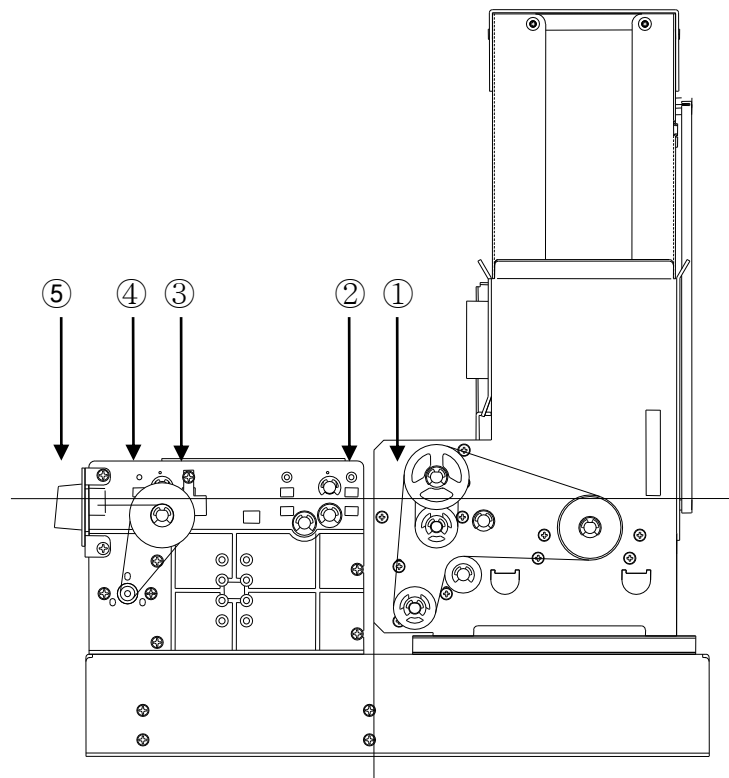

Doc No	CIM2000 SPECIFICATION	REV	PAGE	DATE
		I	27 OF 65	2012. 11. 08

<CIM-2805>

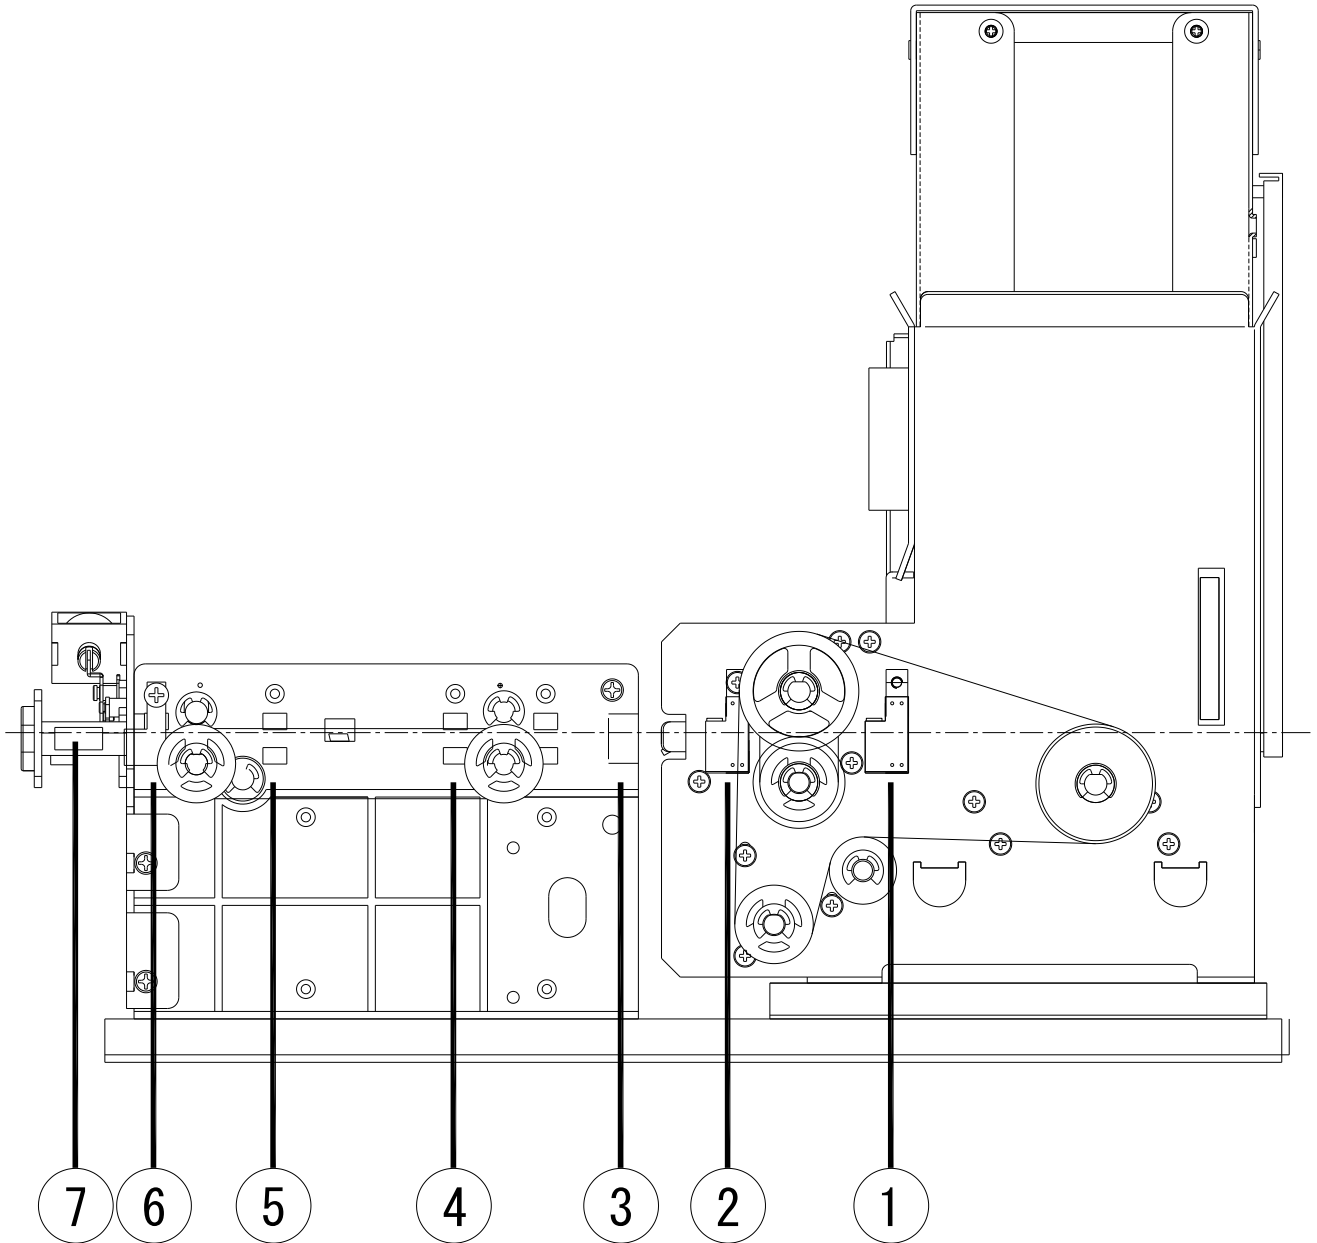

<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
		I	28 OF 65	2012. 11. 08


## 2 SETTING

2.1 “C21” : It is to set or to check ‘RTC IC’.

☞ Command Format

SOH	Null	Length	STX	“C21”	DATA	ETX	Bcc
-----	------	--------	-----	-------	------	-----	-----

☞ Command Data Structure

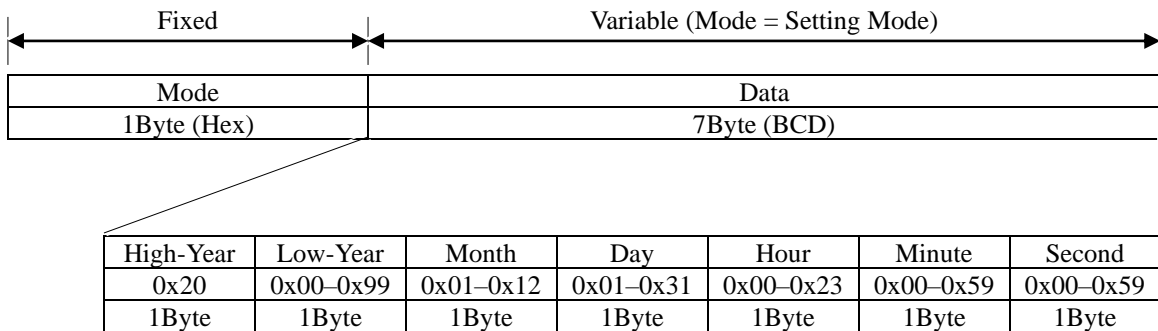


☞ Positive Response Format

SOH	Null	Length	STX	“C21”	GOOD	‘1’	DATA	ETX	Bcc
-----	------	--------	-----	-------	------	-----	------	-----	-----

☞ Negative Response Format

SOH	Null	Length	STX	“C21”	E-Code	‘0’	ETX	Bcc
-----	------	--------	-----	-------	--------	-----	-----	-----

☞ Response Data Structure

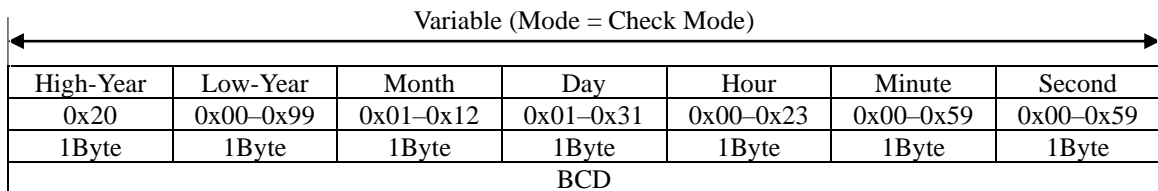

☞ Data Variable

<Mode>

Code	Mode	Detail
0x01	‘Setting Mode’	Set ‘RTC IC’
0x02	‘Check Mode’	Check ‘RTC IC’

☞ Note

‘Day’ is changeable due to the value of ‘Month’.


<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
		I	29 OF 65	2012. 11. 08

2.2 “C23” : It is to set or to check ‘Capture Time’.(This command don’t use CIM-2805)

☞ Command Format

SOH	Null	Length	STX	“C23”	DATA	ETX	Bcc
-----	------	--------	-----	-------	------	-----	-----

☞ Command Data Structure

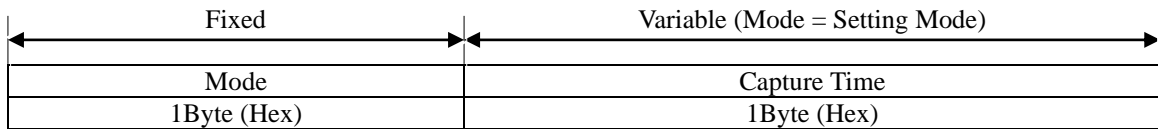


☞ Positive Response Format

SOH	Null	Length	STX	“C23”	GOOD	‘1’	DATA	ETX	Bcc
-----	------	--------	-----	-------	------	-----	------	-----	-----

☞ Negative Response Format

SOH	Null	Length	STX	“C23”	E-Code	‘0’	ETX	Bcc
-----	------	--------	-----	-------	--------	-----	-----	-----

☞ Response Data Structure

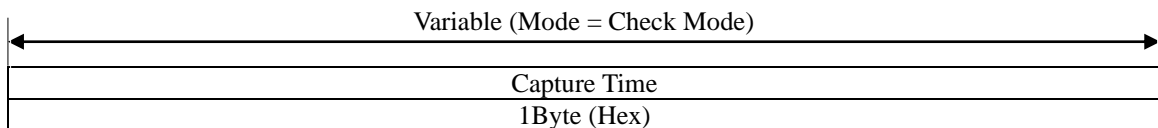

☞ Data Variable

<Mode>

Code	Mode	Detail
0x01	‘Setting Mode’	Set ‘Capture Time’
0x02	‘Check Mode’	Check ‘Capture Time’

<Capture Time>

Code	Setting	Detail	Note
0x00	NON	‘Capture Time’ not set	
0x01	10Sec	‘Capture Time’ to be set 10 seconds	
0x02	20Sec	‘Capture Time’ to be set 20 seconds	
0x03	30Sec	‘Capture Time’ to be set 30 seconds	Default
0x04	40Sec	‘Capture Time’ to be set 40 seconds	
0x05	50Sec	‘Capture Time’ to be set 50 seconds	
0x06	60Sec	‘Capture Time’ to be set 60 seconds	

☞ Note

if user doesn’t pull out the card from the terminal in ‘Capture Time’ period, it gets back the card automatically.


<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
		I	30 OF 65	2012. 11. 08

2.3 “C24” : It is to set or to check ‘Retry Count’.

☞ Command Format

SOH	Null	Length	STX	“C24”	DATA	ETX	Bcc
-----	------	--------	-----	-------	------	-----	-----

☞ Command Data Structure

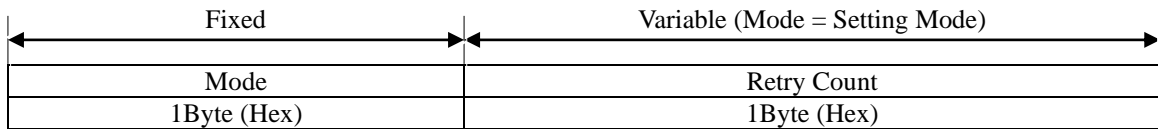


☞ Positive Response Format

SOH	Null	Length	STX	“C24”	GOOD	‘1’	DATA	ETX	Bcc
-----	------	--------	-----	-------	------	-----	------	-----	-----

☞ Negative Response Format

SOH	Null	Length	STX	“C24”	E-Code	‘0’	ETX	Bcc
-----	------	--------	-----	-------	--------	-----	-----	-----

☞ Response Data Structure

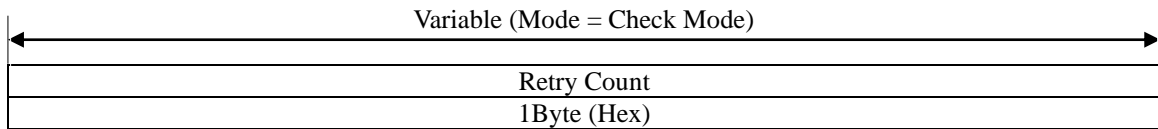

☞ Data Variable

<Mode>

Code	Mode	Detail
0x01	‘Setting Mode’	Set ‘Retry Count’
0x02	‘Check Mode’	Check ‘Retry Count’

<Retry Count>

Code	Setting	Detail	Note
0x00	NON	Do not retry	
0x01	Once	Execute the instruction again.	
0x02	Twice	Retry it twice	
0x03	Three times	Retry it three times	Default

<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
		I	31 OF 65	2012. 11. 08

2.4-1 “C26” : It is to change ‘Baud Rate’ .(This command don’t use CIM-2805)

☞ Command Format

SOH	Null	Length	STX	“C26”	DATA	ETX	Bcc
-----	------	--------	-----	-------	------	-----	-----

☞ Command Data Structure

Baud Rate
1Byte (Hex)

☞ Positive Response Format

SOH	Null	Length	STX	“C26”	GOOD	‘1’	ETX	Bcc
-----	------	--------	-----	-------	------	-----	-----	-----

☞ Negative Response Format

SOH	Null	Length	STX	“C26”	E-Code	‘0’	ETX	Bcc
-----	------	--------	-----	-------	--------	-----	-----	-----

☞ Response Data Structure

☞ Data Variable

<Baud Rate>


Code	Setting	Detail	Note
0x01	9600Bps	Set Baud Rate to be 9600Bps	
0x02	19200Bps	Set Baud Rate to be 19200Bps	
0x03	38400Bps	Set Baud Rate to be 38400Bps	Default
0x04	57600Bps	Set Baud Rate to be 57600Bps	

<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
		I	32 OF 65	2012. 11. 08

2.4-2 It is to change 'Baud Rate' .(Only CIM-2805)

### 2.DIP-SWITCH SETTING

:To provide basic operation and function setting of terminal, DIP(Dual In type Package ) switch in the main board has selection of main program and function of communication speed setting.

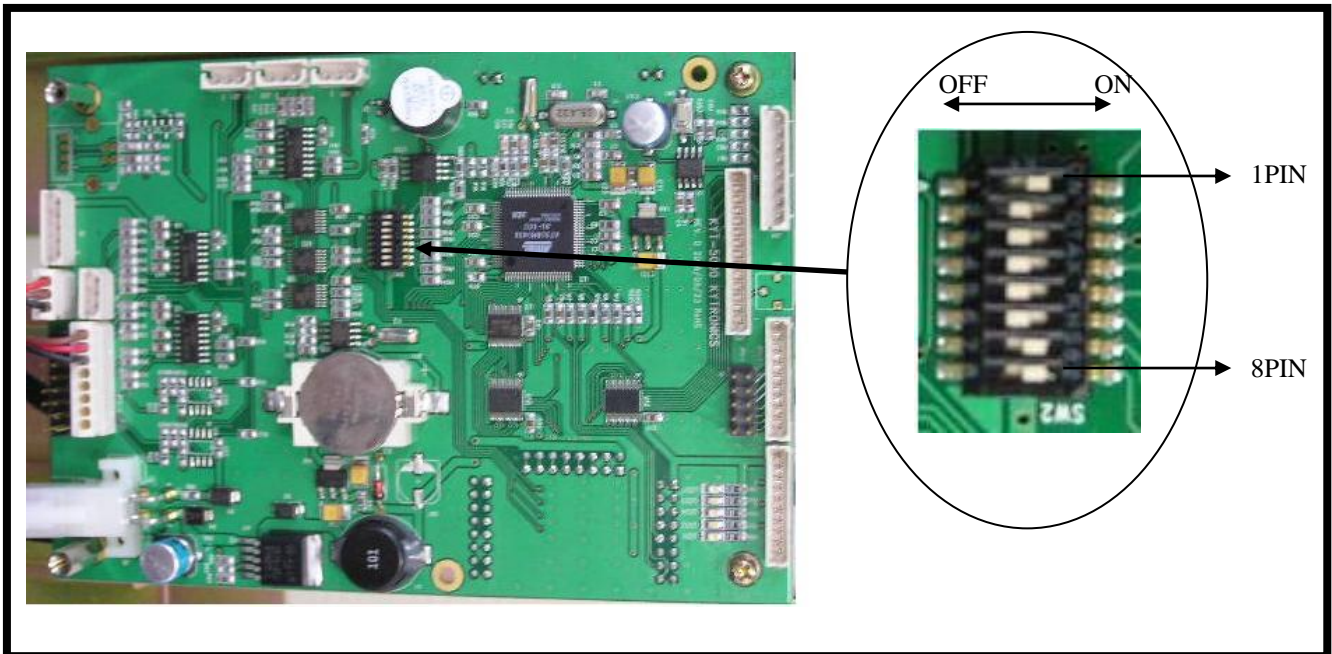

### 2-1 PIN SETTING

PIN NO. 1	Pin NO.2~NO.6	PIN NO. 7	PIN NO. 8	Baud Rate	Remark
ON	OFF	OFF	OFF	9600 BPS	
ON	OFF	OFF	ON	19200 BPS	
ON	OFF	ON	OFF	38400 BPS	Default
ON	OFF	ON	ON	57600 BPS	




<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
		I	33 OF 65	2012. 11. 08

2.5 “C40” : The BUZZ is operate by internal terminal.

☞ Command Format

SOH	Null	Length	STX	“C40”	DATA	ETX	Bcc
-----	------	--------	-----	-------	------	-----	-----

☞ Command Data Structure

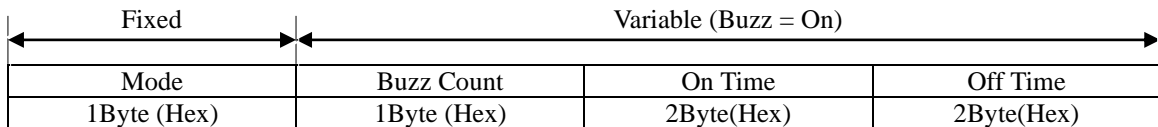

☞ Positive Response Format

SOH	Null	Length	STX	“C40”	GOOD	‘1’	ETX	Bcc
-----	------	--------	-----	-------	------	-----	-----	-----

☞ Negative Response Format

SOH	Null	Length	STX	“C40”	E-Code	‘0’	ETX	Bcc
-----	------	--------	-----	-------	--------	-----	-----	-----

☞ Data Variable

<Mode>

Code	Buzz	Detail
0x01	On	Set Buzz ON
0x02	Off	Set Buzz OFF

<Buzz Count>

Code	Buzz Count	Detail	Note
0x00	Continuous	Buzz continuous occur.	Default
0x01	1	Buzz one time occur.	Note
0x02	2	Buzz two times occur.	Note
---	---	---	---
0x64	100	Buzz hundred times occur.	Note

<On Time/Off Time>

Code	Range	Detail	Note
On Time	100 – 10000	Buzz sound active time	mSec
Off Time	100 – 10000	Buzz sound nonactive time.	mSec

<On Time>, <Off Time>

High Byte	Low Byte
-----------	----------

☞ Note

If set ‘Buzz one time occur’, after the terminal is Buzz one time occur, return to ‘Buzz Off’ state.

<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
		I	34 OF 65	2012. 11. 08

2.4 “C48” : It is to select the Magnetic card type either High-co or Low – co Card.

↳ Command Format

SOH	Null	Length	STX	“C48”	DATA	ETX	Bcc
-----	------	--------	-----	-------	------	-----	-----

↳ Command Data Structure

Data
1 byte

↳ Positive Response Format

SOH	Null	Length	STX	“C48”	GOOD	0x01	ETX	Bcc
-----	------	--------	-----	-------	------	------	-----	-----

↳ Negative Response Format

SOH	Null	Length	STX	“C48”	E-Code	0x00	ETX	Bcc
-----	------	--------	-----	-------	--------	------	-----	-----

↳ Data Variable

<Mode>

Code	Mode	Detail
0x30	Low-co card	It is to select Low-co type.
0x33	High-co card	It is to select High-co type.

<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
		I	35 OF 65	2012. 11. 08

### 3 MOVE

3.1 “C31” : It is to take a card from Cartridge and to move it to Card Reader / Writer Module.

☞ Command Format

SOH	Null	Length	STX	“C31”	DATA	ETX	Bcc
-----	------	--------	-----	-------	------	-----	-----

☞ Command Data Structure

0x00	Module
1Byte (Hex)	1Byte (Hex)

☞ Positive Response Format

SOH	Null	Length	STX	“C31”	GOOD	‘1’	ETX	Bcc
-----	------	--------	-----	-------	------	-----	-----	-----

☞ Negative Response Format

SOH	Null	Length	STX	“C31”	E-Code	‘0’	ETX	Bcc
-----	------	--------	-----	-------	--------	-----	-----	-----

☞ Data Variable

<Module>

Code	Setting	Detail
0x01	MSRW	Card transport to MSRW Module
0x02	IC	Card transport to IC Module
0x03	RF	Card transport to RF Module

3.2 “C32” : It is take card to Card Reader / Writer Module

☞ Command Format

SOH	Null	Length	STX	“C32”	DATA	ETX	Bcc
-----	------	--------	-----	-------	------	-----	-----

☞ Command Data Structure

Module
1Byte (Hex)

☞ Positive Response Format

SOH	Null	Length	STX	“C32”	GOOD	‘1’	DATA	ETX	Bcc
-----	------	--------	-----	-------	------	-----	------	-----	-----

☞ Negative Response Format

SOH	Null	Length	STX	“C32”	E-Code	‘0’	ETX	Bcc
-----	------	--------	-----	-------	--------	-----	-----	-----

☞ Data Variable

<Module>

Code	Setting	Detail
0x01	MSRW	Card transport to MSRW Module
0x02	IC	Card transport to IC Module
0x03	RF	Card transport to RF Module

<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
		I	36 OF 65	2012. 11. 08

### 3.3 “C33” : It is to dispense out card to the front.

#### ☞ Command Format

SOH	Null	Length	STX	“C33”	ETX	Bcc
-----	------	--------	-----	-------	-----	-----

#### ☞ Positive Response Format

SOH	Null	Length	STX	“C33”	GOOD	‘1’	ETX	Bcc
-----	------	--------	-----	-------	------	-----	-----	-----

#### ☞ Negative Response Format

SOH	Null	Length	STX	“C33”	E-Code	‘0’	ETX	Bcc
-----	------	--------	-----	-------	--------	-----	-----	-----

### 3.4 “C34” : It takes card to Bin Box (Capture)

#### ☞ Command Format

SOH	Null	Length	STX	“C34”	ETX	Bcc
-----	------	--------	-----	-------	-----	-----

#### ☞ Positive Response Format

SOH	Null	Length	STX	“C34”	GOOD	‘1’	ETX	Bcc
-----	------	--------	-----	-------	------	-----	-----	-----

#### ☞ Negative Response Format

SOH	Null	Length	STX	“C34”	E-Code	‘0’	ETX	Bcc
-----	------	--------	-----	-------	--------	-----	-----	-----

### 3.5 “C36” : Dispense the card to front and drop it out of the unit.

#### ☞ Command Format

SOH	Null	Length	STX	“C36”	ETX	Bcc
-----	------	--------	-----	-------	-----	-----

#### ☞ Positive Response Format

SOH	Null	Length	STX	“C36”	GOOD	‘1’	ETX	Bcc
-----	------	--------	-----	-------	------	-----	-----	-----

#### ☞ Negative Response Format

SOH	Null	Length	STX	“C36”	E-Code	‘0’	ETX	Bcc
-----	------	--------	-----	-------	--------	-----	-----	-----

#### ☞ Note

The CIM-2xxx model with bezel or shutter can not use “C36” command.

<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
		I	37 OF 65	2012. 11. 08

### ◆ *MAGNETIC CARD*

This section describes the commands that can use at the magnetic card.

The data to be written in every track should be conform to the ISO7816-2 standard, the available character is as follows. For more information about Magnetic card, refer to the ISO7816-2 standard.


Track	Available Character Set	Maximum characters	비 고
Track #1	Character, Numbers	76	Except for the special character
Track #2	Numbers	37	
Track #3	Number	104	

The CIM-2000 provides two features for speedy processing. The first is to provide the command combined with 'FromCartridge' and 'Magnetic Write' command. This feature enables to write on card in the dispenser Cartridge at a command.


The second is to lessen the processing time for the 'magnetic read' command repeated after latching the data read from card. To latch data occurs at a point of time when verify in the magnetic write command and execute the magnetic read command. However, the latched data is erased when the card is off from the terminal.

Doc No	CIM2000 SPECIFICATION	REV	PAGE	DATE
		I	38 OF 65	2012. 11. 08

Basic Magnetic Card Operations:

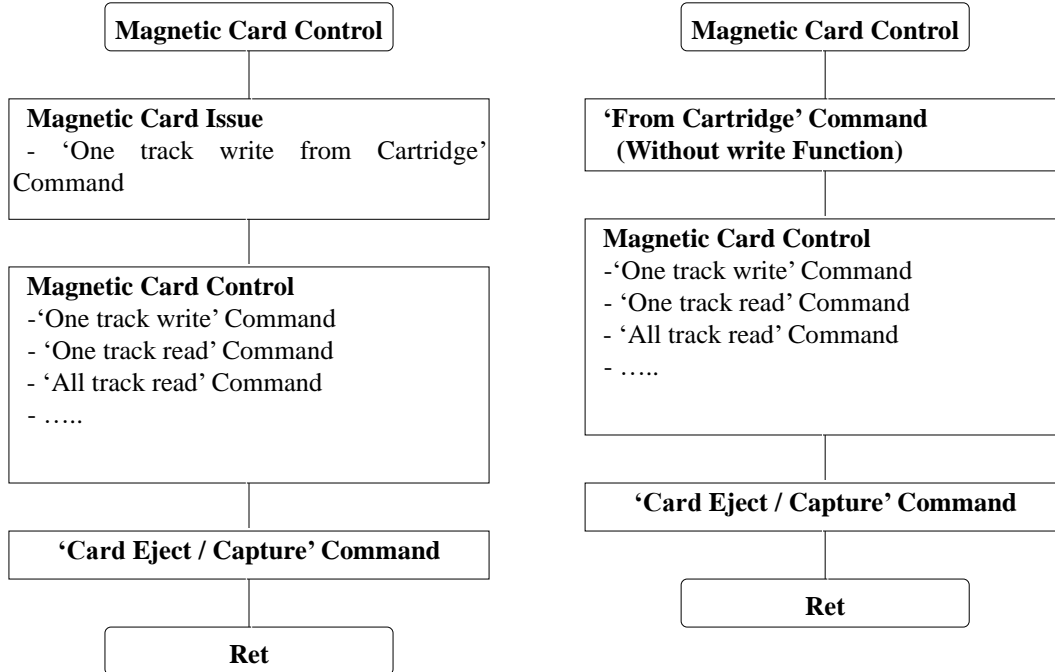

Magnetic Card Operations in the Cartridge

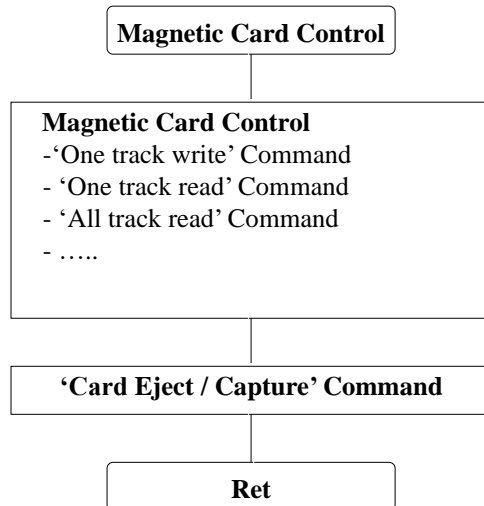

Magnetic Card Operations in the terminal

<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
		I	39 OF 65	2012. 11. 08

## 1 MAGNETIC READ / WRITE

1.1 “M31” : It is to read data on track chosen.

☞ Command Format

SOH	Null	Length	STX	“M31”	DATA	ETX	Bcc
-----	------	--------	-----	-------	------	-----	-----

☞ Command Data Structure

Track (1Byte)
---------------

☞ Positive Response Format

SOH	Null	Length	STX	“M31”	GOOD	‘1’	DATA	ETX	Bcc
-----	------	--------	-----	-------	------	-----	------	-----	-----

☞ Negative Response Format

SOH	Null	Length	STX	“M31”	E-Code	‘0’	ETX	Bcc
-----	------	--------	-----	-------	--------	-----	-----	-----

☞ Response Data Structure

Read Data (ASCII Code)
------------------------

☞ Data Variable

<Track>

Code	Setting	Detail
0x01	Track 1	Read data on Track 1
0x02	Track 2	Read data on Track 2
0x03	Track 3	Read data on Track 3

☞ Note

If the ‘Magnetic Read’ command is executed normally, the read data is latched.

1.2 “M33” : It is to write data on track chosen.

☞ Command Format

SOH	Null	Length	STX	“M33”	DATA	ETX	Bcc
-----	------	--------	-----	-------	------	-----	-----

☞ Command Data Structure

Track 1Byte (Hex)	Write Data (ASCII Code)
----------------------	----------------------------

☞ Positive Response Format

SOH	Null	Length	STX	“M33”	GOOD	‘1’	ETX	Bcc
-----	------	--------	-----	-------	------	-----	-----	-----

☞ Negative Response Format

SOH	Null	Length	STX	“M33”	E-Code	‘0’	ETX	Bcc
-----	------	--------	-----	-------	--------	-----	-----	-----

☞ Data Variable

<Track>

Code	Setting	Detail
0x01	Track 1	Write data to Track 1
0x02	Track 2	Write data to Track 2
0x03	Track 3	Write data to Track 3

☞ Note

If the ‘Magnetic Write’ command is executed normally, the written data is latched. This command has the ‘Verify’ feature.

<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
		I	40 OF 65	2012. 11. 08

1.3 “M34” : It is to take a card from Cartridge and to write data to a selected track.

☞ Command Format

SOH	Null	Length	STX	“M34”	DATA	ETX	Bcc
-----	------	--------	-----	-------	------	-----	-----

☞ Command Data Structure

0x00	Track	Write Data
1Byte (Hex)	1Byte (Hex)	(ASCII Code)

☞ Positive Response Format

SOH	Null	Length	STX	“M34”	GOOD	‘1’	ETX	Bcc
-----	------	--------	-----	-------	------	-----	-----	-----

☞ Negative Response Format

SOH	Null	Length	STX	“M34”	E-Code	‘0’	ETX	Bcc
-----	------	--------	-----	-------	--------	-----	-----	-----

☞ Data Variable

<Track>

Code	Setting	Detail
0x01	Track 1	Write data to Track 1
0x02	Track 2	Write data to Track 2
0x03	Track 3	Write data to Track 3

☞ Note

This command has the Data ‘Latch ‘and ‘Verify’ features.

1.4 “M35” : It is to read data from all three tracks.

☞ Command Format

SOH	Null	Length	STX	“M35”	ETX	Bcc
-----	------	--------	-----	-------	-----	-----

☞ Positive Response Format

SOH	Null	Length	STX	“M35”	GOOD	‘1’	DATA	ETX	Bcc
-----	------	--------	-----	-------	------	-----	------	-----	-----

☞ Negative Response Format

SOH	Null	Length	STX	“M35”	E-Code	‘0’	ETX	Bcc
-----	------	--------	-----	-------	--------	-----	-----	-----

☞ Response Data Structure

Track1 Data	0x00	Track2 Data	0x00	Track3 Data
(ASCII)	1Byte (Hex)	(ASCII)	1Byte (Hex)	(ASCII)

☞ Note

If the ‘Magnetic Read’ command is executed normally, the read data is latched.



<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
		I	41 OF 65	2012. 11. 08

1.5 “M36” : It is to Write data from all three tracks.

☞ Command Format

SOH	Null	Length	STX	“M36”	DATA	ETX	Bcc
-----	------	--------	-----	-------	------	-----	-----

☞ Command Data Structure

Track1 Data	0x00	Track2 Data	0x00	Track3 Data
(ASCII) Max 76 byte	1Byte(Hex)	(ASCII) Max 36 byte	1Byte(Hex)	(ASCII) Max 104 byte

☞ Positive Response Format

SOH	Null	Length	STX	“M36”	GOOD	0x01	ETX	Bcc
-----	------	--------	-----	-------	------	------	-----	-----

☞ Negative Response Format

SOH	Null	Length	STX	“M36”	E-Code	0x00	ETX	Bcc
-----	------	--------	-----	-------	--------	------	-----	-----

## 2 CLEANING

2.1 “M51” : It is to clean Magnetic Head mounted inside MSR.W.

☞ Command Format

SOH	Null	Length	STX	“M51”	ETX	Bcc
-----	------	--------	-----	-------	-----	-----

☞ Positive Response Format

SOH	Null	Length	STX	“M51”	GOOD	‘1’	ETX	Bcc
-----	------	--------	-----	-------	------	-----	-----	-----

☞ Negative Response Format

SOH	Null	Length	STX	“M51”	E-Code	‘0’	ETX	Bcc
-----	------	--------	-----	-------	--------	-----	-----	-----


Doc No	CIM2000 SPECIFICATION	REV	PAGE	DATE
		I	42 OF 65	2012. 11. 08

### ◆ IC CARD

This section describes the commands that can use at the IC card

The IC card should conform to the ISO7816-4 T=0/T=1, these cards is available.

Basic Operating Procedure for the IC card and Memory Card:

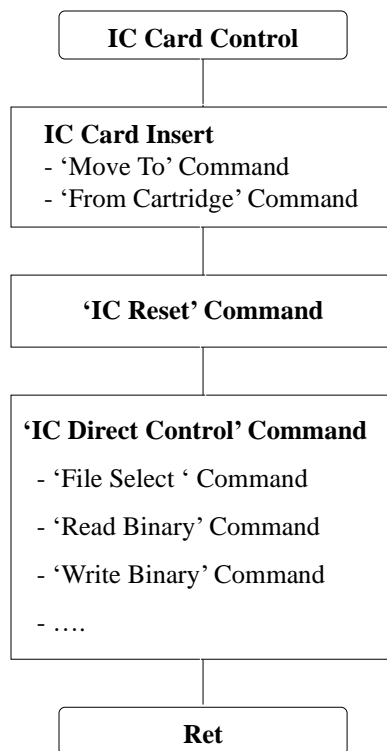

<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
		I	43 OF 65	2012. 11. 08

## 1 IC CONTROL

### 1.1 “I21” : Reset the IC card and receive the ATR from card.

#### Command Format

SOH	Null	Length	STX	“I21”	ETX	Bcc
-----	------	--------	-----	-------	-----	-----

#### Positive Response Format

SOH	Null	Length	STX	“I21”	GOOD	‘1’	DATA	ETX	Bcc
-----	------	--------	-----	-------	------	-----	------	-----	-----

#### Negative Response Format

SOH	Null	Length	STX	“I21”	E-Code	‘0’	ETX	Bcc
-----	------	--------	-----	-------	--------	-----	-----	-----

#### Response Data Structure

Length _ High	Length _ Low	ATR (Answer To Request)
2Byte		
		←————— Length —————→

#### Example

##### SAMSUNG SCOS ATR

15 Byte	0x3B	0x6B	0x00	0x00	0x80	0x31	0x80	0x63
	0x53	0x46	0x01	0x83	0x03	0x90	0x00	

### 1.2 “I22” : Control the card conforming to the ISO 7816 T=0 / T=1, ISO 7816 – 4 standard directly.

#### Command Format

SOH	Null	Length	STX	“I22”	DATA	ETX	Bcc
-----	------	--------	-----	-------	------	-----	-----

#### Command Data Structure

Length _ High	Length _ Low	IC Command & IC Data
2Byte		
		←————— Length —————→

#### Positive Response Format

SOH	Null	Length	STX	“I22”	GOOD	‘1’	DATA	ETX	Bcc
-----	------	--------	-----	-------	------	-----	------	-----	-----

#### Negative Response Format


SOH	Null	Length	STX	“I22”	E-Code	‘0’	ETX	Bcc
-----	------	--------	-----	-------	--------	-----	-----	-----

#### Response Data Structure

Length _ High	Length _ Low	IC Data (or Result)
2Byte		
		←————— Length —————→

<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
		I	44 OF 65	2012. 11. 08

IC Command & IC Data Structure

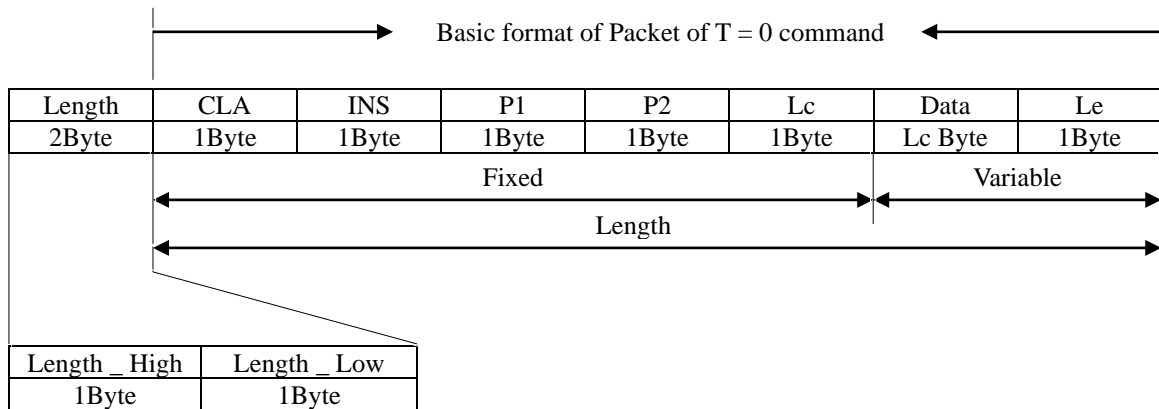

CLA	Class	Note
INS	Instruction	
P1	Offset(High Value)	
P2	Offset(Low Value)	
Lc	A number of data to transfer	Max Value : 255
Data	Data to Transfer	
Le	A number of data to receive	

Format of T = 0 Command

Command	INS Code (Hex Value)
Read Binary Command	B0
Write Binary Command	D0
Update Binary Command	D6
Erase Binary Command	0E
Read Record(s) Command	B2
Write Record Command	D2
Append Record Command	E2
Update Record Command	DC
Get Data Command	CA
Put Data Command	DA
Select File Command	A4
Verify Command	20
Internal Authenticate Command	88
External Authenticate Command	82
Get Challenge Command	84
Manage Channel Command	70

For more information, refer to the ISO 7816 – 4 standard.

<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
		I	45 OF 65	2012. 11. 08

☞ Frame Command for SAMSUNG SCOS 3.0

Command	INS Code (Hex Value)
Put Key	EA
Create File	E0
Block	1E
UnBlock	18
Create Session	8A
Set Life Cycle	E8
Forbidden AC	1C
Initialize IEP	50
Load / Cancel IEP	52
Purchase /Unload / Complete IEP	54
Update Parameter	56
Read Balance	5C

### 1.3 “I23” : Selects IC card or Sam card.

☞ Command Format

SOH	Null	Length	STX	“I23”	ETX	Bcc
-----	------	--------	-----	-------	-----	-----

☞ Positive Response Format

SOH	Null	Length	STX	“I23”	GOOD	0x01	DATA	ETX	Bcc
-----	------	--------	-----	-------	------	------	------	-----	-----

☞ Negative Response Format

SOH	Null	Length	STX	“I23”	E-Code	0x00	ETX	Bcc
-----	------	--------	-----	-------	--------	------	-----	-----

☞ Response Data Structure

Mode
1 Byte

☞ Data Variable

<Mode>

Code	Detail
0x30	Selects IC card as the target of control
0x31	Selects SAM card as the target of control

☞ Note

Reset value of Mode is 0x30.

<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
		I	46 OF 65	2012. 11. 08

### ◆ *RF CARD*


This section describes the commands that can use at the 'RF CARD'.

The RF Module of his model supports only the MIFARE card.

Item	Cm0	Cm1	Cm2	Detail	Note
RF CARD READ / WRITE	'R'	'3'	'1'	RF Card Read in Block Range	
	'R'	'3'	'2'	RF Card Write in Block Range	Verify
	'R'	'3'	'6'	RF Card Read in Sector Range	
	'R'	'3'	'7'	RF Card Write in Sector Range	
BALANCE	'R'	'4'	'1'	Balance Increment	
	'R'	'4'	'2'	Balance Decrement	
SECRET KEY CHANGE	'R'	'5'	'1'	Change 'Secret Key' to other Key	
	'R'	'5'	'2'	Change 'Secret Key' to all the same Key value	
	'R'	'5'	'3'	Select 'Secret Key Index'	
	'R'	'5'	'4'	Change 'RF Card Secret Key' to other Key	
	'R'	'5'	'5'	Key Set and Change 'Secret Key' to other Key	
	'R'	'5'	'6'	Key Set and Change 'Secret Key' to all the same Key value	
RF DETECT	'R'	'6'	'1'	Check RF card in antenna area	

To use the RF card, you need to initialize at first.


- Setting and updating of the secret key and secret key index.

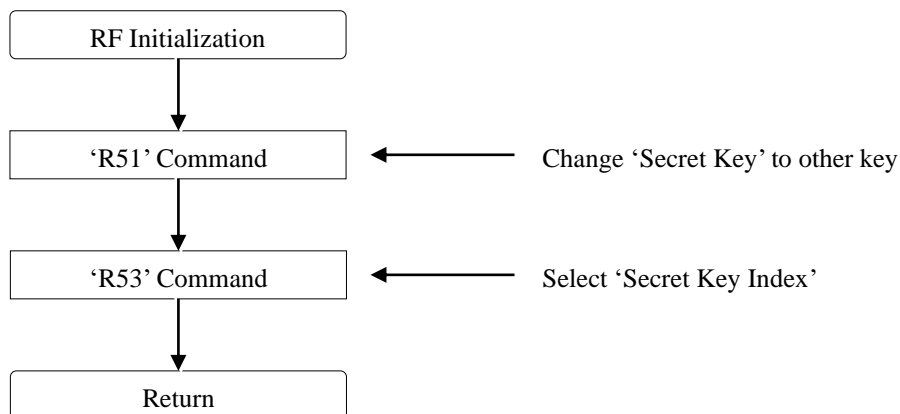

RF Module Initialization

<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
		I	47 OF 65	2012. 11. 08

Basic Operating Procedure of the RF card:

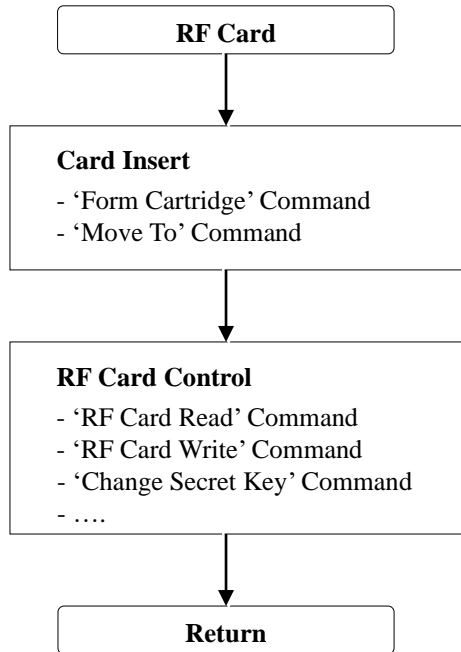

RF Card Basic Operating Procedures

Memory Architecture(map) of the RF card: 1Kbyte

Sector	Block	Size	Detail	Note
Sector 0	Block 0	16Byte	RF Card Information	Can't use
	Block 1	16Byte		
	Block 2	16Byte		
	Block 3	16Byte	'Sector Key'	
Sector 1	Block 0	16Byte	User Available Memory	
	Block 1	16Byte		
	Block 2	16Byte		
	Block 3	16Byte	'Sector Key'	
Sector 2	Block 0	16Byte	User Available Memory	
	Block 1	16Byte		
	Block 2	16Byte		
	Block 3	16Byte	'Sector Key'	
---	---	---	---	---
Sector 15	Block 0	16Byte	User Available Memory	
	Block 1	16Byte		
	Block 2	16Byte		
	Block 3	16Byte	'Sector Key'	

<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
		I	48 OF 65	2012. 11. 08

Memory Architecture(map) of the RF card: 4Kbyte.

Sector	Block	Size	Detail	Note
Sector 0	Block 0	16Byte	RF Card Information	Can't use
	Block 1	16Byte		
	Block 2	16Byte	'Sector Key'	
	Block 3	16Byte		
Sector 1	Block 0	16Byte	User Available Memory	
	Block 1	16Byte		
	Block 2	16Byte	'Sector Key'	
	Block 3	16Byte		
Sector 2	Block 0	16Byte	User Available Memory	
	Block 1	16Byte		
	Block 2	16Byte	'Sector Key'	
	Block 3	16Byte		
---	---	---	---	---
Sector 31	Block 0	16Byte	User Available Memory	
	Block 1	16Byte		
	Block 2	16Byte	'Sector Key'	
	Block 3	16Byte		
Sector 32	Block 0	16Byte	User Available Memory	
	Block 1	16Byte		
	Block 2	16Byte		
	Block 3	16Byte		
	Block 4	16Byte		
	---	---		
	Block 13	16Byte		
	Block 14	16Byte		
Block 15	16Byte	'Sector Key'	Can't use	
---	---	---	---	---
Sector 39	Block 0	16Byte	User Available Memory	
	Block 1	16Byte		
	Block 2	16Byte		
	Block 3	16Byte		
	Block 4	16Byte		
	---	---		
	Block 13	16Byte		
	Block 14	16Byte		
Block 15	16Byte	'Sector Key'	Can't use	



<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
		I	49 OF 65	2012. 11. 08

## 1 RF CARD READ / WRITE

### 1.1 “R31” : Read RF card data & Secret Key in block range

#### ☞ Command Format

SOH	Null	Length	STX	“R31”	DATA	ETX	Bcc
-----	------	--------	-----	-------	------	-----	-----

#### ☞ Command Data Structure

Sector	Block
0x00-0x0f or 0x00-0x27	0x00- 0x03 or 0x00-0x15
1Byte (Hex)	1Byte (Hex)

#### ☞ Positive Response Format

SOH	Null	Length	STX	“R31”	GOOD	‘1’	DATA	ETX	Bcc
-----	------	--------	-----	-------	------	-----	------	-----	-----

#### ☞ Negative Response Format

SOH	Null	Length	STX	“R31”	E-Code	‘0’	ETX	Bcc
-----	------	--------	-----	-------	--------	-----	-----	-----

#### ☞ Response Data Structure

Sector	Block	Read Data
1Byte (Hex)	1Byte (Hex)	16 Byte (Hex)

D0	D1	D2	---	D14	D15
1Byte	1Byte	1Byte	---	1Byte	1Byte

#### ☞ Note

1K can use the sector 0 to 15 contain 3blocks for storing data.

4K can use the sector 0 to 31 contain 3blocks and sector 32 to 39 contain 15 blocks for storing data.

### 1.2 “R32” : Write RF card data in block range

#### ☞ Command Format

SOH	Null	Length	STX	“R32”	DATA	ETX	Bcc
-----	------	--------	-----	-------	------	-----	-----

#### ☞ Command Data Structure

Sector	Block	Write Data
0x00-0x0f or 0x00-0x27	0x00- 0x02 or 0x00-0x14	0x00 – 0xff
1Byte (Hex)	1Byte (Hex)	16Byte (Hex)

D0	D1	D2	---	D14	D15
1Byte	1Byte	1Byte	---	1Byte	1Byte

#### ☞ Positive Response Format

SOH	Null	Length	STX	“R32”	GOOD	‘1’	ETX	Bcc
-----	------	--------	-----	-------	------	-----	-----	-----

#### ☞ Negative Response Format

SOH	Null	Length	STX	“R32”	E-Code	‘0’	ETX	Bcc
-----	------	--------	-----	-------	--------	-----	-----	-----

#### ☞ Note

1K can use the sector 0 to 15 contain 3blocks for storing data.

4K can use the sector 0 to 31 contain 3blocks and sector 32 to 39 contain 15 blocks for storing data.

<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
		I	50 OF 65	2012. 11. 08

1.3 “R36” : Read RF card data in sector range

☞ Command Format

SOH	Null	Length	STX	“R36”	DATA	ETX	Bcc
-----	------	--------	-----	-------	------	-----	-----

☞ Command Data Structure

Sector
0x00 – 0x0f or 0x00 – 0x27
1Byte (Hex)

☞ Positive Response Format

SOH	Null	Length	STX	“R36”	GOOD	‘1’	DATA	ETX	Bcc
-----	------	--------	-----	-------	------	-----	------	-----	-----

☞ Negative Response Format

SOH	Null	Length	STX	“R36”	E-Code	‘0’	ETX	Bcc
-----	------	--------	-----	-------	--------	-----	-----	-----

☞ Response Data Structure

0x00	Read Data (0)	0x01	Read Data (1)	0x02	Read Data (2)
1Byte (Hex)	16Byte (Hex)	1Byte (Hex)	16Byte (Hex)	1Byte (Hex)	16Byte (Hex)

D0	D1	D2	---	D14	D15
1Byte	1Byte	1Byte	---	1Byte	1Byte

☞ Note

1K can use the sector 0 to 15 contain 3blocks for storing data.

4K can use the sector 0 to 31 contain 3blocks and sector 32 to 39 contain 15 blocks for storing data.

1.4 “R37” : Write RF card data in sector range (except Sector 0)

☞ Command Format

SOH	Null	Length	STX	“R37”	DATA	ETX	Bcc
-----	------	--------	-----	-------	------	-----	-----

☞ Command Data Structure

Sector	Write Data
0x00 – 0x0f or 0x00 – 0x27	0x00 – 0xff
1Byte (Hex)	51Byte (Hex)

0x00	Read Data (0)	0x01	Read Data (1)	0x02	Read Data (2)
1Byte (Hex)	16Byte (Hex)	1Byte (Hex)	16Byte (Hex)	1Byte (Hex)	16Byte (Hex)

D0	D1	D2	---	D14	D15
1Byte	1Byte	1Byte	---	1Byte	1Byte

☞ Positive Response Format

SOH	Null	Length	STX	“R37”	GOOD	‘1’	ETX	Bcc
-----	------	--------	-----	-------	------	-----	-----	-----

☞ Negative Response Format

SOH	Null	Length	STX	“R37”	E-Code	‘0’	ETX	Bcc
-----	------	--------	-----	-------	--------	-----	-----	-----

☞ Note

1K can use the sector 0 to 15 contain 3blocks for storing data.

4K can use the sector 0 to 31 contain 3blocks and sector 32 to 39 contain 15 blocks for storing data.

<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
		I	51 OF 65	2012. 11. 08

## 2 BALANCE

2.1 “R41” : Increment the balance of card to the specified amount.

### Command Format

SOH	Null	Length	STX	“R41”	DATA	ETX	Bcc
-----	------	--------	-----	-------	------	-----	-----

### Command Data Structure

Sector	Block	Index Value
0x00-0x0f or 0x00-0x27	0x00- 0x02 or 0x00-0x14	0x00000000 – 0xffffffff
1Byte (Hex)	1Byte (Hex)	4Byte (Hex)

V0	V1	V2	V3
0x00-0xff	0x00-0xff	0x00-0xff	0x00-0xff
1Byte(Hex, LSB)	1Byte(Hex)	1Byte(Hex)	1Byte(Hex, MSB)

### Positive Response Format

SOH	Null	Length	STX	“R41”	GOOD	‘1’	ETX	Bcc
-----	------	--------	-----	-------	------	-----	-----	-----

### Negative Response Format

SOH	Null	Length	STX	“R41”	E-Code	‘0’	ETX	Bcc
-----	------	--------	-----	-------	--------	-----	-----	-----

### Note

The balance should be written in the Electronic Purse format in the card.

1K can use the sector 0 to 15 contain 3blocks for storing data.

4K can use the sector 0 to 31 contain 3blocks and sector 32 to 39 contain 15 blocks for storing data.

2.1 “R42” : Decrement the balance of card to the specified amount..

### Command Format

SOH	Null	Length	STX	“R42”	DATA	ETX	Bcc
-----	------	--------	-----	-------	------	-----	-----

### Command Data Structure

Sector	Block	Index Value
0x00-0x0f or 0x00-0x27	0x00- 0x02 or 0x00-0x14	0x00000000 – 0xffffffff
1Byte (Hex)	1Byte (Hex)	4Byte (Hex)

V0	V1	V2	V3
0x00-0xff	0x00-0xff	0x00-0xff	0x00-0xff
1Byte(Hex, LSB)	1Byte(Hex)	1Byte(Hex)	1Byte(Hex, MSB)

### Positive Response Format

SOH	Null	Length	STX	“R42”	GOOD	‘1’	ETX	Bcc
-----	------	--------	-----	-------	------	-----	-----	-----

### Negative Response Format

SOH	Null	Length	STX	“R42”	E-Code	‘0’	ETX	Bcc
-----	------	--------	-----	-------	--------	-----	-----	-----

### Note

The balance should be written in the Electronic Purse format in the card.

1K can use the sector 0 to 15 contain 3blocks for storing data.

4K can use the sector 0 to 31 contain 3blocks and sector 32 to 39 contain 15 blocks for storing data.

<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
		I	52 OF 65	2012. 11. 08

### 3 SECRET KEY

#### 3.1 “R51” : Change ‘Secret Key’ to a new key

☞ Command Format

SOH	Null	Length	STX	“R51”	DATA	ETX	Bcc
-----	------	--------	-----	-------	------	-----	-----

☞ Command Data Structure

Sector	KEY A	KEY B
0x00 – 0x0f or 0x00 – 0x27	0x00 – 0xff	0x00 – 0xff
1Byte (Hex)	6Byte (Hex)	6Byte (Hex)

☞ Positive Response Format

SOH	Null	Length	STX	“R51”	GOOD	‘1’	ETX	Bcc
-----	------	--------	-----	-------	------	-----	-----	-----

☞ Negative Response Format

SOH	Null	Length	STX	“R51”	E-Code	‘0’	ETX	Bcc
-----	------	--------	-----	-------	--------	-----	-----	-----

☞ Note

CIM-2000 Series ‘Secret Key’ Default – Key Set 0

KEY A : FFFFFFFFFF

KEY B : FFFFFFFFFF

1K can use the sector 0 to 15 contain 3blocks for storing data.

4K can use the sector 0 to 31 contain 3blocks and sector 32 to 39 contain 15 blocks for storing data.

#### 3.2 “R52” : Change ‘Secret Key’ to all the same key value

☞ Command Format

SOH	Null	Length	STX	“R52”	DATA	ETX	Bcc
-----	------	--------	-----	-------	------	-----	-----

☞ Command Data Structure

KEY A	KEY B
0x00 – 0xff	0x00 – 0xff
6Byte (Hex)	6Byte (Hex)

☞ Positive Response Format

SOH	Null	Length	STX	“R52”	GOOD	‘1’	ETX	Bcc
-----	------	--------	-----	-------	------	-----	-----	-----

☞ Negative Response Format

SOH	Null	Length	STX	“R52”	E-Code	‘0’	ETX	Bcc
-----	------	--------	-----	-------	--------	-----	-----	-----

☞ Note

CIM-2000 Series ‘Secret Key’ Default – Key Set 0

KEY A : FFFFFFFFFF

KEY B : FFFFFFFFFF

<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
		I	53 OF 65	2012. 11. 08

### 3.3 “R53” : Select ‘Secret Key Index’

#### ☞ Command Format

SOH	Null	Length	STX	“R53”	DATA	ETX	Bcc
-----	------	--------	-----	-------	------	-----	-----

#### ☞ Command Data Structure

Index
0x01 – 0x02
1Byte (Hex)

#### ☞ Positive Response Format

SOH	Null	Length	STX	“R53”	GOOD	‘1’	ETX	Bcc
-----	------	--------	-----	-------	------	-----	-----	-----

#### ☞ Negative Response Format

SOH	Null	Length	STX	“R53”	E-Code	‘0’	ETX	Bcc
-----	------	--------	-----	-------	--------	-----	-----	-----

#### ☞ Data Variable

<Index>

Code	Setting	Detail
0x01	KEY A	Select ‘Secret Key A’
0x02	KEY B	Select ‘Secret Key B’

#### ☞ Note

CIM-2000 Series ‘Secret Key Index’ Default

‘Secret Key Index ‘ : KEY A

### 3.4 “R54” : Change RF card ‘Secret Key’ to other key

#### ☞ Command Format

SOH	Null	Length	STX	“R54”	DATA	ETX	Bcc
-----	------	--------	-----	-------	------	-----	-----

#### ☞ Command Data Structure

Sector	KEY A	Access	KEY B
0x00 – 0x0f or 0x00 – 0x27	0x00 – 0xff	0x00 – 0xff	0x00 – 0xff
1Byte (Hex)	6Byte (Hex)	4Byte (Hex)	6Byte (Hex)

#### ☞ Positive Response Format

SOH	Null	Length	STX	“R54”	GOOD	‘1’	ETX	Bcc
-----	------	--------	-----	-------	------	-----	-----	-----

#### ☞ Negative Response Format

SOH	Null	Length	STX	“R54”	E-Code	‘0’	ETX	Bcc
-----	------	--------	-----	-------	--------	-----	-----	-----

#### ☞ Warning

If you use this command incorrectly, it couldn’t be authenticated from the card.

1K can use the sector 0 to 15 contain 3blocks for storing data.

4K can use the sector 0 to 31 contain 3blocks and sector 32 to 39 contain 15 blocks for storing data.

<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
		I	54 OF 65	2012. 11. 08

### 3.5 “R55” : Change ‘Secret Key’ to a new key from Key Set Number.

#### ☞ Command Format

SOH	Null	Length	STX	“R55”	DATA	ETX	Bcc
-----	------	--------	-----	-------	------	-----	-----

#### ☞ Command Data Structure

Key Set	Sector	KEY A	KEY B
0x00 – 0x02	0x00 – 0x0f	0x00 – 0xff	0x00 – 0xff
1 Byte(Hex)	1Byte (Hex)	6Byte (Hex)	6Byte (Hex)

#### ☞ Positive Response Format

SOH	Null	Length	STX	“R55”	GOOD	‘1’	ETX	Bcc
-----	------	--------	-----	-------	------	-----	-----	-----

#### ☞ Negative Response Format

SOH	Null	Length	STX	“R55”	E-Code	‘0’	ETX	Bcc
-----	------	--------	-----	-------	--------	-----	-----	-----

#### ☞ Note

##### Key Set <Index>

Code	Detail
0x00	Key Set 0
0x01	Key Set 1
0x02	Key Set 2

### 3.6 “R56” : Change ‘Secret Key’ to all the same key value from Key Set Number.

#### ☞ Command Format

SOH	Null	Length	STX	“R56”	DATA	ETX	Bcc
-----	------	--------	-----	-------	------	-----	-----

#### ☞ Command Data Structure

Key Set	KEY A	KEY B
0x00 – 0x02	0x00 – 0xff	0x00 – 0xff
1 Byte(Hex)	6Byte (Hex)	6Byte (Hex)

#### ☞ Positive Response Format

SOH	Null	Length	STX	“R56”	GOOD	‘1’	ETX	Bcc
-----	------	--------	-----	-------	------	-----	-----	-----

#### ☞ Negative Response Format

SOH	Null	Length	STX	“R56”	E-Code	‘0’	ETX	Bcc
-----	------	--------	-----	-------	--------	-----	-----	-----

#### ☞ Note

##### Key Set <Index>

Code	Detail
0x00	Key Set 0
0x01	Key Set 1
0x02	Key Set 2

<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
		I	55 OF 65	2012. 11. 08

#### *4 RF DETECT*

##### 4.1 “R61” : RF card detect in antenna area

☞ Command Format

SOH	Null	Length	STX	“R61”	ETX	Bcc
-----	------	--------	-----	-------	-----	-----

☞ Positive Response Format

SOH	Null	Length	STX	“R61”	GOOD	DATA	‘1’	ETX	Bcc
-----	------	--------	-----	-------	------	------	-----	-----	-----

☞ Negative Response Format

SOH	Null	Length	STX	“R61”	E-Code	‘0’	ETX	Bcc
-----	------	--------	-----	-------	--------	-----	-----	-----

☞ Response Data Structure

Serial Number
Hex Code
4Byte

☞ Note

If the RF card is detected, this command send the serial number to host. But, it doesn't authenticate the Secret Key of the RF card.

<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
		I	56 OF 65	2012. 11. 08

◆ *MIFARE ULTRA LIGHT CARD(Only Use the CIM-28xx Series)*

**- Memory Organisation**

The 512Bit EEPROM Memory is organized in 16 pages with 4 bytes each.

In the erased state the EEPROM cells are read as a logic “0”, in the written state as a logical “1”

Byte Number	0	1	2	3	Page
Serial Number	SN0	SN1	SN2	BCC0	0
Serial Number	SN3	SN4	SN5	SN6	1
Internal / Lock	BCC1	Internal	Lock0	Lock1	2
OTP	OTP0	OTP1	OTP2	OTP3	3
Data read/write	Data0	Data1	Data2	Data3	4
Data read/write	Data4	Data5	Data6	Data7	5
Data read/write	Data8	Data9	Data10	Data11	6
Data read/write	Data12	Data13	Data14	Data15	7
Data read/write	Data16	Data17	Data18	Data19	8
Data read/write	Data20	Data21	Data22	Data23	9
Data read/write	Data24	Data25	Data26	Data27	10
Data read/write	Data28	Data29	Data30	Data31	11
Data read/write	Data32	Data33	Data34	Data35	12
Data read/write	Data36	Data37	Data38	Data39	13
Data read/write	Data40	Data41	Data42	Data43	14
Data read/write	Data44	Data45	Data46	Data47	15


**Note:** Bold frame indicates user area



Doc No	CIM2000 SPECIFICATION	REV	PAGE	DATE
		I	57 OF 65	2012. 11. 08

## - UID / SERIAL NUMBER

The unique 7 byte serial number (UID) and its two Check Bytes are programmed into the first 9 bytes of the memory. It therefore covers page 0, page 1 and the first byte of page 2. The second byte of page2 is reserved for internal data. Due to security and system requirements these bytes are write-protected after having been programmed by the IC manufacturer after production

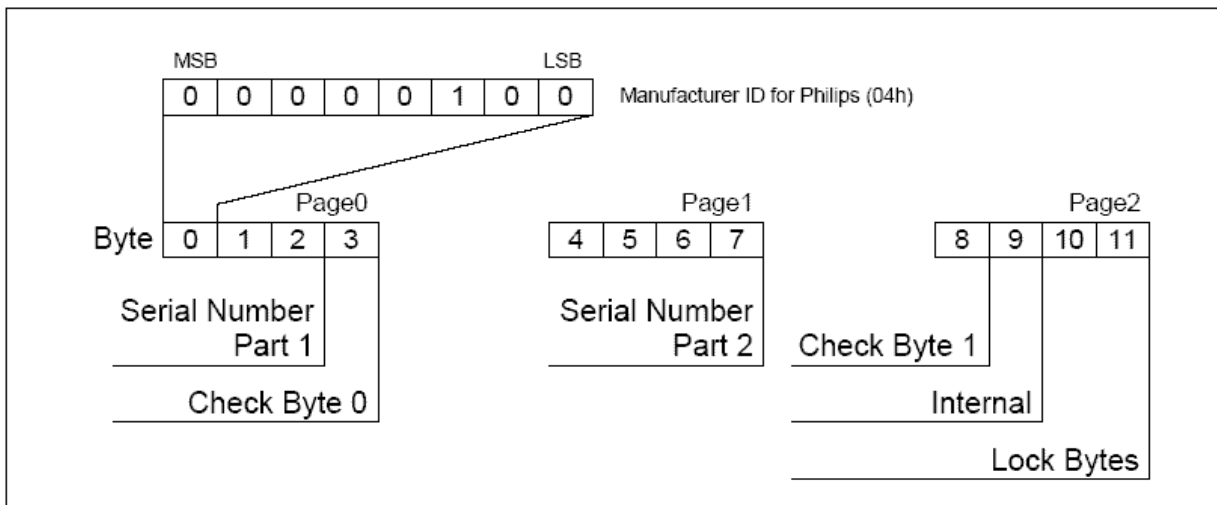


## - LOCK BYTES

The bits of Byte 2 and 3 of page 2 represent the field-programmable read-only locking mechanism. Each Page x from 3 (OTP) to 15 may be locked individually to prevent further write access by setting the

<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
		I	58 OF 65	2012. 11. 08

corresponding locking bit Lx to 1. After locking the page is read-only memory.

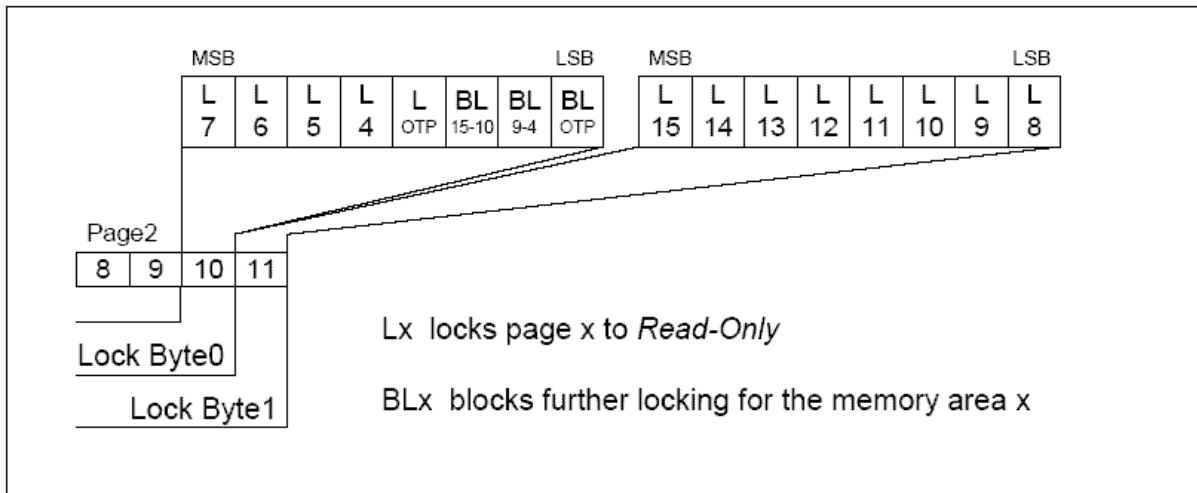

<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
		I	59 OF 65	2012. 11. 08

The 3 least significant bits of lock byte 0 are the block-locking bits. Bit 2 handles pages 15 to 10, bit 1 pages 9 to 4 and bit 0 page 3 (OTP). Once the block-locking bits are set the locking configuration for the corresponding memory area is frozen

## - OTP BYTES

Page 3 is the OTP page. It is pre-set to all “0” after production. These bytes may be bit-wise modified by a write command.

Byte	Page 3			
	12	13	14	15
OTP Bytes				

Example			
Default Value		OTP Bytes	
00000000	00000000	00000000	00000000
1st Write Command to page 3			
11111111	11111100	00000101	00000111
Result in page 3			
11111111	11111100	00000101	00000111
2nd Write Command to page 3			
11111111	00000000	00111001	10000000
Result in page 3			
11111111	11111100	00111101	10000111

The bytes of the write command and the current contents of the OTP bytes are bit-wise “or-ed” and the result becomes the new contents of the OTP bytes. This process is irreversible. If a bit is set to “1”, it cannot be changed back to “0” again.

<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
			I	60 OF 65

**Note :** This memory area may be used as a 32 ticks one-time counter.

#### **- DATA PAGES**

Pages 4 to 15 constitute the user read/write area. After production the data pages are initialized to all "0".

<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
		I	61 OF 65	2012. 11. 08

## 1 MIFARE ULTRA LIGHT CONTROL

1.1 “U31” : It is to read data on Mifare Ultra Light card.

☞ Command Format

SOH	Null	Length	STX	“U31”	DATA	ETX	Bcc
-----	------	--------	-----	-------	------	-----	-----

☞ Command Data Structure

Page (1Byte)
--------------

☞ Positive Response Format

SOH	Null	Length	STX	“U31”	GOOD	‘1’	DATA	ETX	Bcc
-----	------	--------	-----	-------	------	-----	------	-----	-----

☞ Negative Response Format

SOH	Null	Length	STX	“U31”	E-Code	‘0’	ETX	Bcc
-----	------	--------	-----	-------	--------	-----	-----	-----

☞ Response Data Structure

Page	Read Data
1 Byte (Hex)	16 Bytes (Hex)

1.2 “U32” : It is to write data on Mifare Ultra Light card.

☞ Command Format

SOH	Null	Length	STX	“U32”	DATA	ETX	Bcc
-----	------	--------	-----	-------	------	-----	-----

☞ Command Data Structure

Page	Write Data
1Byte (Hex)	4 Bytes (Hex)

☞ Positive Response Format

SOH	Null	Length	STX	“U32”	GOOD	‘1’	ETX	Bcc
-----	------	--------	-----	-------	------	-----	-----	-----

☞ Negative Response Format

SOH	Null	Length	STX	“U32”	E-Code	‘0’	ETX	Bcc
-----	------	--------	-----	-------	--------	-----	-----	-----

1.3 “U41” : It is to read UID (Serial Number) on Mifare Ultra Light card.

☞ Command Format

SOH	Null	Length	STX	“U41”	ETX	Bcc
-----	------	--------	-----	-------	-----	-----

☞ Positive Response Format

SOH	Null	Length	STX	“U41”	GOOD	DATA	‘1’	ETX	Bcc
-----	------	--------	-----	-------	------	------	-----	-----	-----

☞ Negative Response Format

SOH	Null	Length	STX	“U41”	E-Code	‘0’	ETX	Bcc
-----	------	--------	-----	-------	--------	-----	-----	-----

☞ Response Data Structure

UID (Serial Number)
7 Bytes (Hex)

Doc No	CIM2000 SPECIFICATION	REV	PAGE	DATE
		I	62 OF 65	2012. 11. 08

## ERROR DETAIL

### <GOOD>

Code : 0x0000  
Description: Normal Execution  
Procedures: None

### <NOT\_DEFINE\_COMMAND>

Code : 0x2001  
Description : Using the command that does not defined in this model.  
Action : Use the valid command in this model.

### <NOT\_USE\_COMMAND>

Code : 0x2002  
Description : Not available command in this model.  
Action : Use the valid command in this model.

### <COMM\_FRAME\_ERROR>

Code : 0x2003  
Description : Sending the command that has the invalid communication frame.  
Action : Check the data format and the corresponding module specification.

### <CARD\_JAM>

Code : 0x2004  
Description : When the card is jammed.  
Action : Remove the jammed card.

### <NO\_CARD>

Code : 0x2005  
Description : No cards.  
Action : Insert the card.

<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
		I	63 OF 65	2012. 11. 08

<CARD\_PRESENT>

Code : 0x2006

Description : When the card exists already in the terminal.

Action : Eject the card.

<BUSY>

Code : 0x2007

Description : When the terminal is running or busy.

Action : Wait until the previous operation is completed.

<RTC\_ERROR>

Code : 0x2008

Description : When the RTC time is incorrect by internal terminal or incorrect input data.

Action : RTC time resetting

<TWO\_MORE>

Code : 0x2009

Description : When more than two cards exit in the terminal simultaneously.

Action : Remove the Card .

<CARD\_ERROR>

Code : 0x200B

Description : When the using card error, commonly occur in MSR.W.

Action : Exchange the Card

<DISPENSER\_ERROR>

Code : 0x2100

Description : Not Applicable Dispenser.

Action : Reset the terminal and exchange the dispenser..

<DISPENSER\_COMM\_ERROR>

Code : 0x2101

Description : Dispenser communication error

Action : Check the communication line and reset the terminal.

<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
		I	64 OF 65	2012. 11. 08

<ALL\_EMPTY>

Code : 0x2104

Description : No cards at Cartridge.

Action : Load the card in the Cartridge.

<DISPENSER\_CARTRIDGE\_EMPTY>

Code : 0x2105

Description : No card at the Issuing machine.

Action : Load the card at the Cartridge.

<DISPENSER\_CARTRIDGE\_WARNING>

Code : 0x2107

Description : A few cards in the Issuing machine.

Action : Load the card at the Cartridge.

< DISPENSER\_NO\_CARTRIDGE\_ERROR >

Error Code : 0x2113

Description : There is no cartridge in Issuing Machine

<MSRW\_ERROR>

Code : 0x2200

Description : The MS Reader/Writer that cannot use in this model.

Action : Change the MS Reader/Writer.

<MSRW\_COMM\_ERROR>

Code : 0x2201

Description : The MS Reader/Writer communication error.

Action : Check the communication line and reset the terminal.



<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
		I	65 OF 65	2012. 11. 08

<MSRW\_WRITE\_ERROR>

Code : 0x2202

Description : Error when the MS Reader/Writer is writing on the card.

Action : Clean the header and check the card.

<MSRW\_READ\_ERROR>

Code : 0x2203

Description : Error when the MS Reader/Writer is reading on the card.

Action : Clean the header and check the card.

<IC\_CONTACT\_ERROR>

Code : 0x2204

Description : Error while the terminal contacts the IC card.

Action : Be sure that the current card is an IC card.

<IC\_CONTROL\_ERROR>

Code : 0x2205

Description : Error while the terminal executes the IC card command.

Action : Check if the command is able to use in the contacted card.

<MS BLANK ERROR >

Code : 0x2209

Description : No data on the magnetic card

Action : Write data on the magnetic card.

<RF\_ERROR>

Code : 0x2300

Description : Unavailable RF module.

Action : Change the RF MODULE

<RF\_COMM\_ERROR>

Code : 0x2301

Description : Communication error at the RF Module.

Action : Check the connection socket

Doc No	CIM2000 SPECIFICATION	REV	PAGE	DATE
		I	66 OF 65	2012. 11. 08

<RF\_AUTHEN\_ERROR>

Code : 0x2302

Description : Authentication Error at the RF Module.

Action : Change the 'SECRET KEY'

<RF\_WRITE\_ERROR>

Code : 0x2303

Description : Error while the terminal writes at the RF Card.

Action : Be sure that the card exists in the detection range.

<RF\_READ\_ERROR>

Code : 0x2304

Description : Error while the terminal reads at the RF Card.

Action: Be sure that the card exists in the detection range.

<RF\_DETECT\_ERROR>

Error Code : 0x2305

Description : No RF Card.

Action : Insert the RF Card into the terminal.

<RF\_VALUE\_ERROR>

Code : 0x2306

Description : Error while the value increases(or decreases) at the RF Card.

Action: Be sure that the card exists in the detection range.

<FLASH\_ERROR>

Code : 0x2400

Description : Unavailable FLASH memory ic.

Action : Change the main control board

<b>Doc No</b>	<b>CIM2000 SPECIFICATION</b>	<b>REV</b>	<b>PAGE</b>	<b>DATE</b>
			I	67 OF 65

## **Precautions**

1. Check if the card exists in Cartridge. Otherwise, it may not issue the card.