

R6

UHF RFID Sled Reader

Accessories



STD. Spec.

Adapter



PWR-R6-5V2A-CN



PWR-R6-5V2A-EU



PWR-R6-5V2A-UK



PWR-R6-5V2A-US

Adapter(CN/EU/UK/US), I/P: 100-240V, O/P: 5V2A, use with DC-R6-USB cable

USB Cable



DC-BK-TypeC
USB cable


Battery



BTRY-R6-52MA
5200mAh Li-ion battery

Optional

Charging Cradles

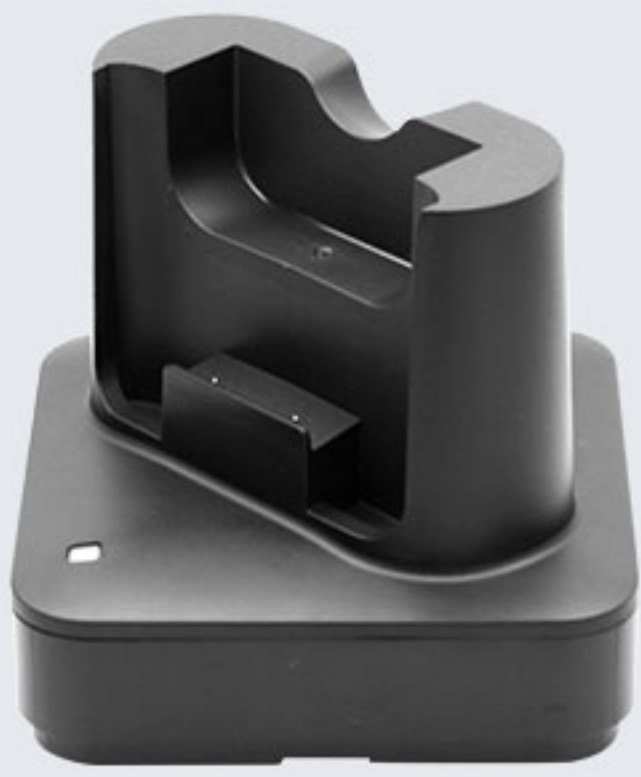

CRD-R6-DOC
Charging Cradle for R6 device only, use with DCPWR-12V2A-XX adapter.

Holster



SG-R6-CPH

Charging Cradle



DCPWR-12V2A-XX

CRD-R2-MBC
Charging Cradle for battery, up to 2 slots, use with DCPWR-12V2A-XX adapter.